



# ***Pro Convert Audio DX***

*User Manual, Reference and FAQ*

# TABLE OF CONTENTS

## Getting Started 03

Overview 03

Key Features 03

System Requirements 04

## Tutorial 05

## Installation 06

Safety Information 06

Interfaces and Indications 07

Cable Connections 08

## Web UI Configuration 10

Accessing the Web UI 11

Signing In/Out 13

Dashboard 15

Global Settings 18

Dante 20

Stream 23

Matrix 33

System 35

Rebooting/Resetting Pro Convert 49

## FAQ 51


## Support 62

## Warranty 63

## Notice 65

## Glossary and Abbreviations 66

# Getting Started

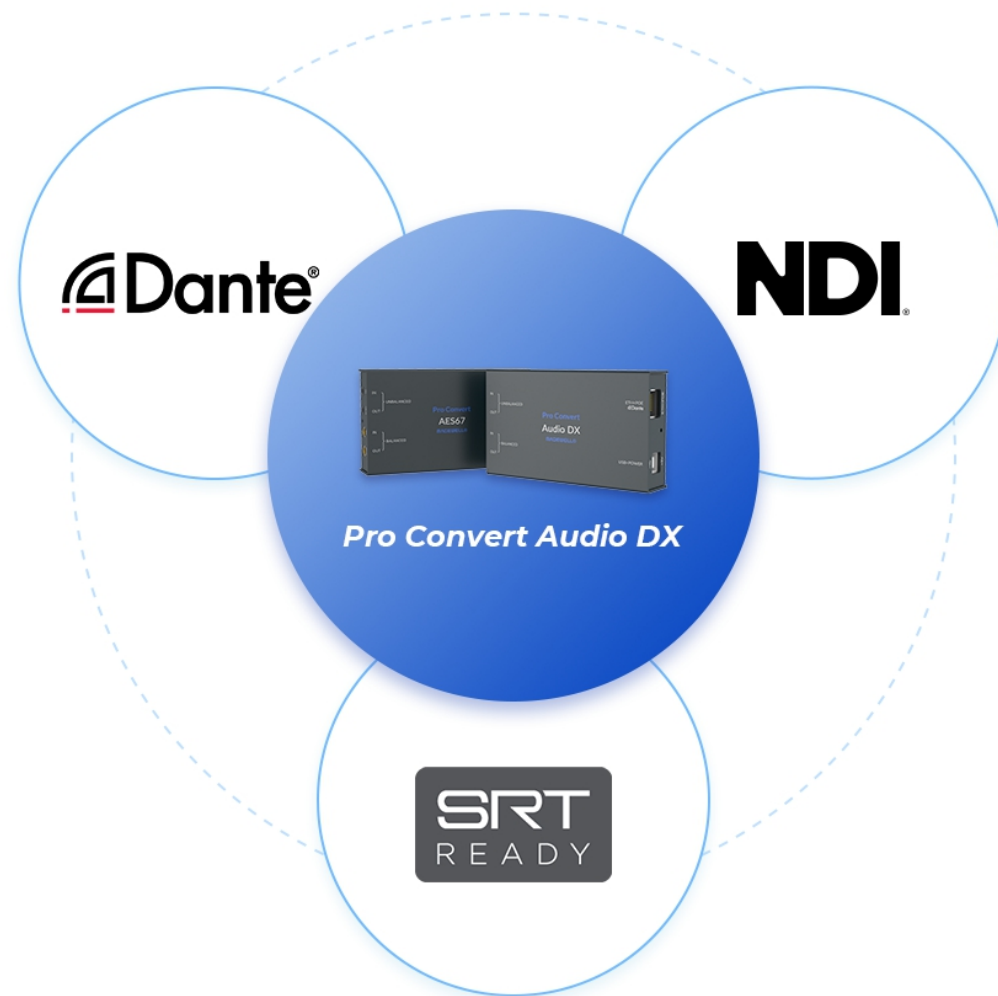

## Overview

Pro Convert™ Audio DX allows you to use the audio gear you already own - your trusted compressors, equalizers or analog power amplifiers - adapt them to the world of audio networking with Magewell audio unit, processing receive and transmit analog and digital audio data.

The ultra-compact Pro Convert devices are ideal for both in-studio and portable field use. Value-added features for live production applications include WebUI for remote control, a ¼-20 thread for mounting accessories, effectively broadcast audio online - NDI/SRT/Dante, and audio over IP - native Audio DX. The units can be powered by either a DC adapter or via Power over Ethernet (PoE) for further deployment simplicity.

## Key Features

- Input and output 3.5mm unbalanced/4.4mm balanced/USB Audio Class/Dante/NDI/SRT
- Nanosecond accuracy timing synchronization is provided using IEEE 1588-2008 Precision Time Protocol (PTP) Version 2 (PTPv2) (Dante)
- Integrated A/D and D/A audio converters
- Remotely manage via Magewell Cloud and Web UI
- Compatibility with a wide variety of TCP/IP devices, including PC and audio processing software
- Dual power input options, powered by Power over Ethernet (PoE) switch, a PoE injector (802.3 af) or DC 5V via MicroUSB connector



## System Requirements

### Network

- Gigabit Ethernet

### Supported Web Browser for the Web UI

- Google Chrome version 49 and above
- Microsoft Edge
- Mozilla Firefox version 61 and above
- Apple Safari 11.1 and above
- Opera 55.0.2994.44 and above

# Tutorial

The setup procedures are as follows:

1. Make a workflow plan.
2. Complete the converter configuration of each session based on your business plan, including cable connections, input and output sessions, routing scheme and other required parameters. After the configuration is completed, save the configuration.
  - To connect cables to your device and power it on, refer to [Installation](#).
  - To connect UNBALANCED 3.5mm and BALANCED 4.4mm INs and OUTs, refer to [Installation](#).
  - To set Dante sessions, refer to [user manual of Dante product](#). Then your converter will discover the Dante stream automatically.
  - To configure NDI/SRT Caller/SRT Listener RX sessions, refer to [set RX sessions](#).
  - To configure NDI/SRT Caller/SRT Listener/RTSP TX sessions, refer to [set TX sessions](#).
  - To configure audio routing relationships of all INs and OUTs, refer to [Matrix](#).
3. Check whether RX/TX sessions are working successfully.

# Installation

## Safety Information

### Electrical Safety


- Seek professional assistance before using an adapter or extension cord. These devices could interrupt the grounding circuit.
- Make sure that you are using the correct power adapter for the local voltage. If you are not sure about the voltage of the electrical outlet you are using, contact your local power company.
- If the power adapter is broken, do not try to fix it by yourself. Contact a qualified service technician or your retailer for help.

### Operation Safety


- Before using the product, make sure all cables are correctly connected and the power cables are not damaged. If you notice any damage, contact your dealer immediately.
- To avoid short circuits, keep paper clips, screws, and staples away from connectors, slots, sockets and circuitry.
- Avoid dust, humidity, and temperature extremes. Do not place the product in any area where it may become wet.
- Place the product on a stable surface.
- If you encounter technical problems with the product, contact your dealer or the Magewell Support Team via [support@magewell.net](mailto:support@magewell.net).

## Interfaces and Indications

### Pro Convert Audio DX

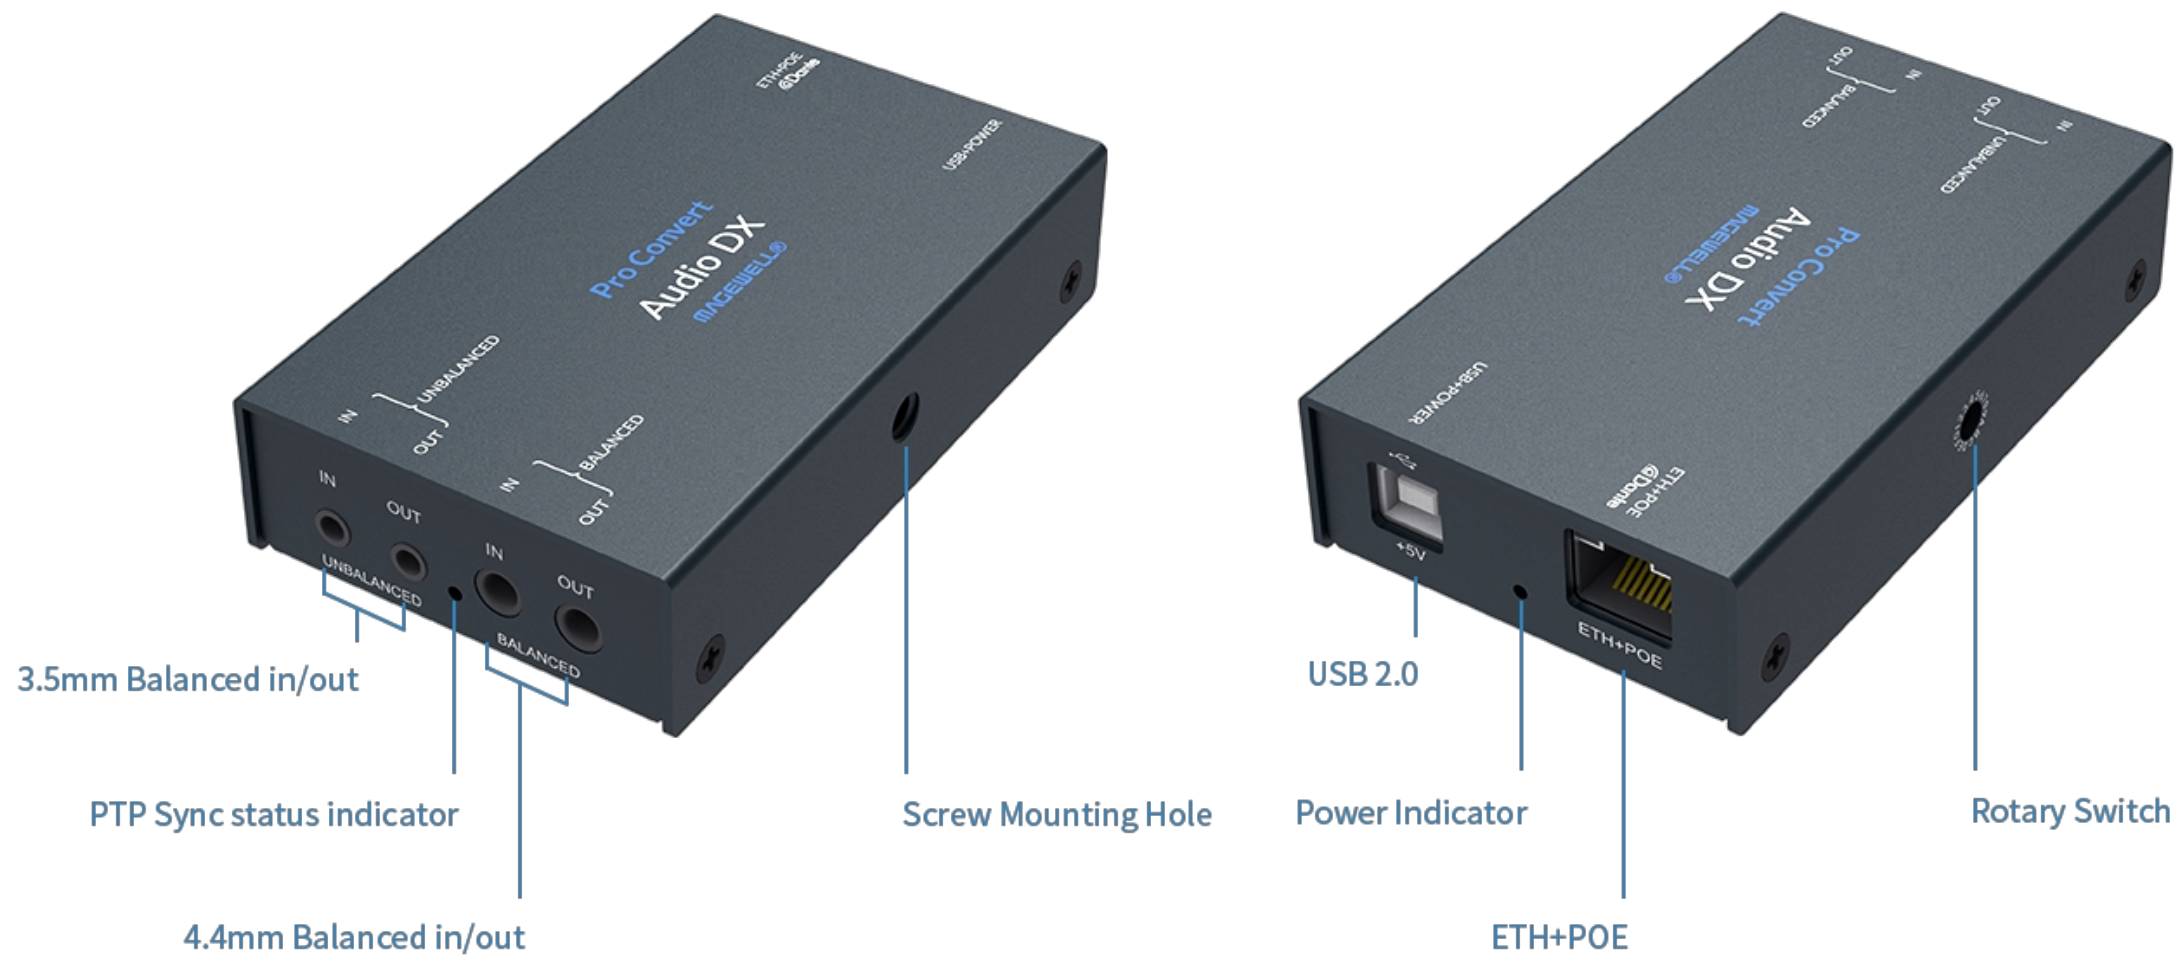

## Cable Connections

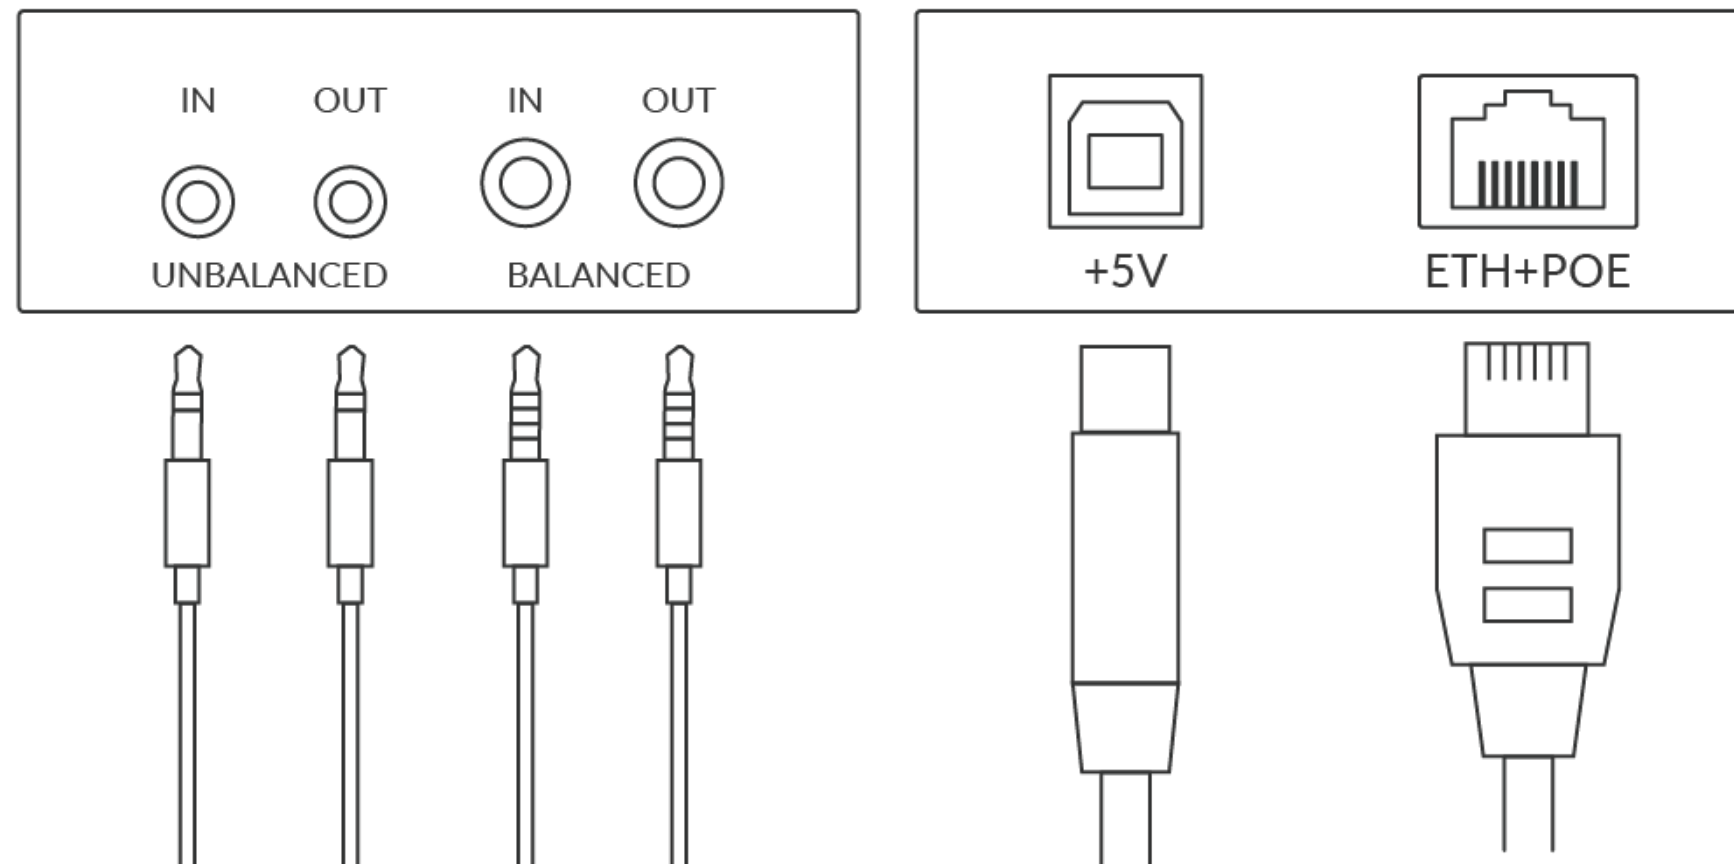

1. Plug in the USB cable to USB+POWER port.
  - For power supply: Connect the other end of the USB cable to the power adapter.



- For USB Net: Connect the other end of the USB cable to your computer.
  - For UAC(USB audio class): Connect the other end of the USB cable to the USB audio source.
2. Plug in the Ethernet cable to ETH+POE port.
    - For PoE: Connect the other end of the Ethernet cable to a PoE switch or a PoE adapter for power and Ethernet connection.
    - For Ethernet connection: To ensure high speed transmission, it is recommended to connect the Pro Convert unit to a gigabit network.
  3. (Optional) Connect UNBALANCED 3.5mm/BALANCED 4.4mm IN/OUT (if needed) for analog audio.

# Web UI Configuration

Pro Convert allows to be controlled via a web-based user interface. With the Web UI, you can monitor the device's working status, input signal status, and configure settings for your sessions.

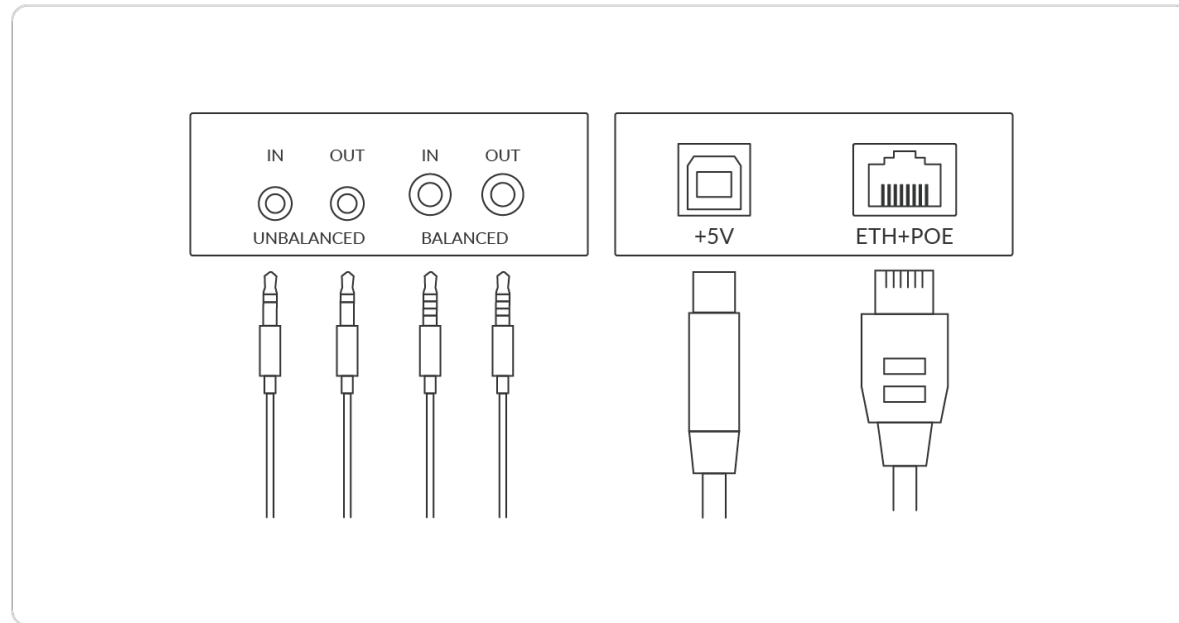


Figure1. Cable connections

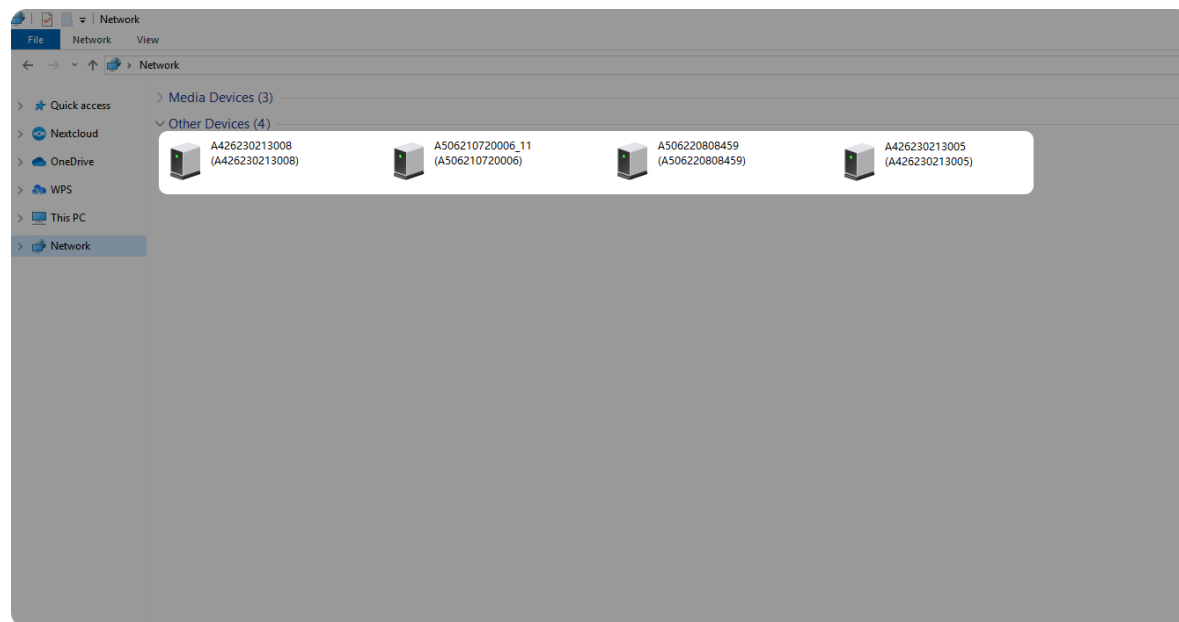


Figure2. Find your device in the **Network > Other Devices** section

## Accessing the Web UI

If you know your device's IP address, type it into your web browser to display the Web UI. Alternatively, you can access the Web UI in one of the following ways.

1. For Windows users (win7 and above), you can find and access your Pro Convert device as a Network device in a [File Explorer window](#).
2. [Using the USB NET function](#).

### Solution 1: using Windows File Explorer

This method is available for Windows(Win7 and above) users.

1. Connect your converter via Ethernet and power it up as shown on the left Figure1 Cable connections.
2. Open a **File Explorer** window in one of the following ways.
  - Click on the **Start** button and find File Explorer in the Start menu.
  - Press the Windows logo key + E.
  - Select the folder icon on the taskbar.
3. Select the **Network** at the bottom of the list of items on the left side of the File Explorer.
4. Turn on the network discovery function if prompted.
5. Find your Pro Convert device in the **Other Devices** section, where it will be shown as "**serial number**".

The **serial number** (marked on your device) will be in a form like "B401180706006".


- Double click the converter icon to open the Web UI of the device in your web browser.

### Solution 2: using USB NET


- Connect the device and your computer using a USB cable as the left figure.
- Type the USB NET IP address in your web browser. The default address is **192.168.66.1**.

The pop-up web UI of the connected device will be shown in your browser.

Please do not change it unless there is a conflict in your network.

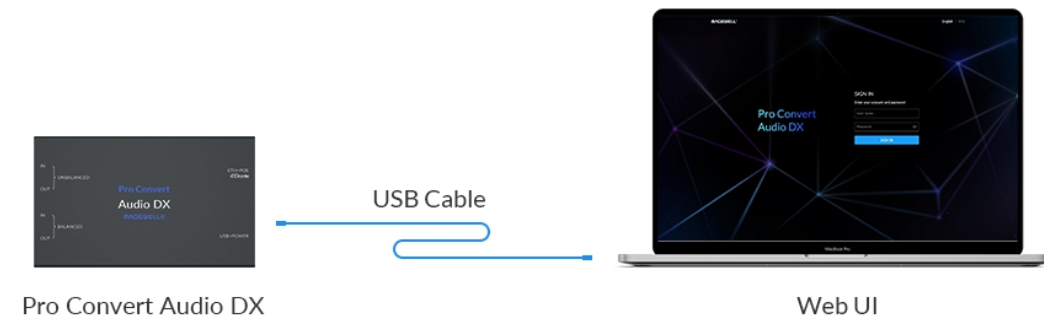

⚠ Do not connect more than one unit simultaneously to the same system via USB NET.

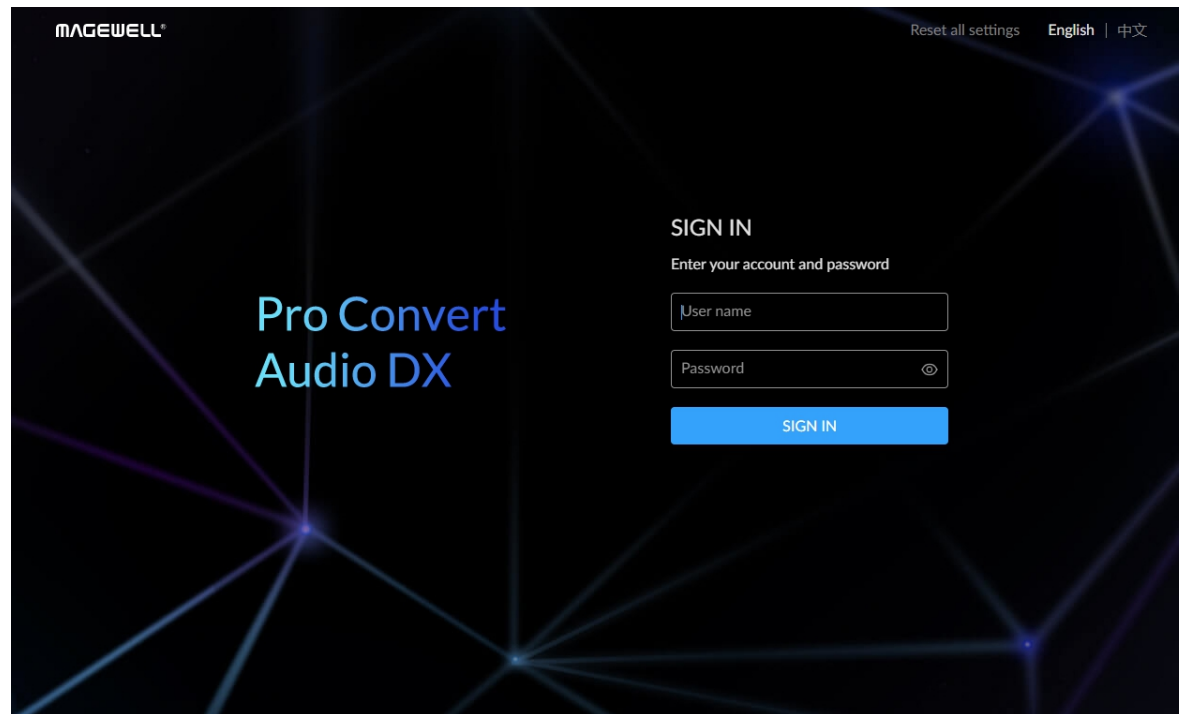


## Signing In/Out


The Web UI allows multi-users to have read/write access to make configuration settings at the same time after login. However, operate on one device simultaneously by many people is not recommended for it may cause configuration conflicts.

**Signing In:** enter your account and password in the **SIGN IN** page.

- The default administrator account name and password are as follows:  
Username: **Admin**  
Password: **Admin**
- We recommend you to change the admin password after logged-in.



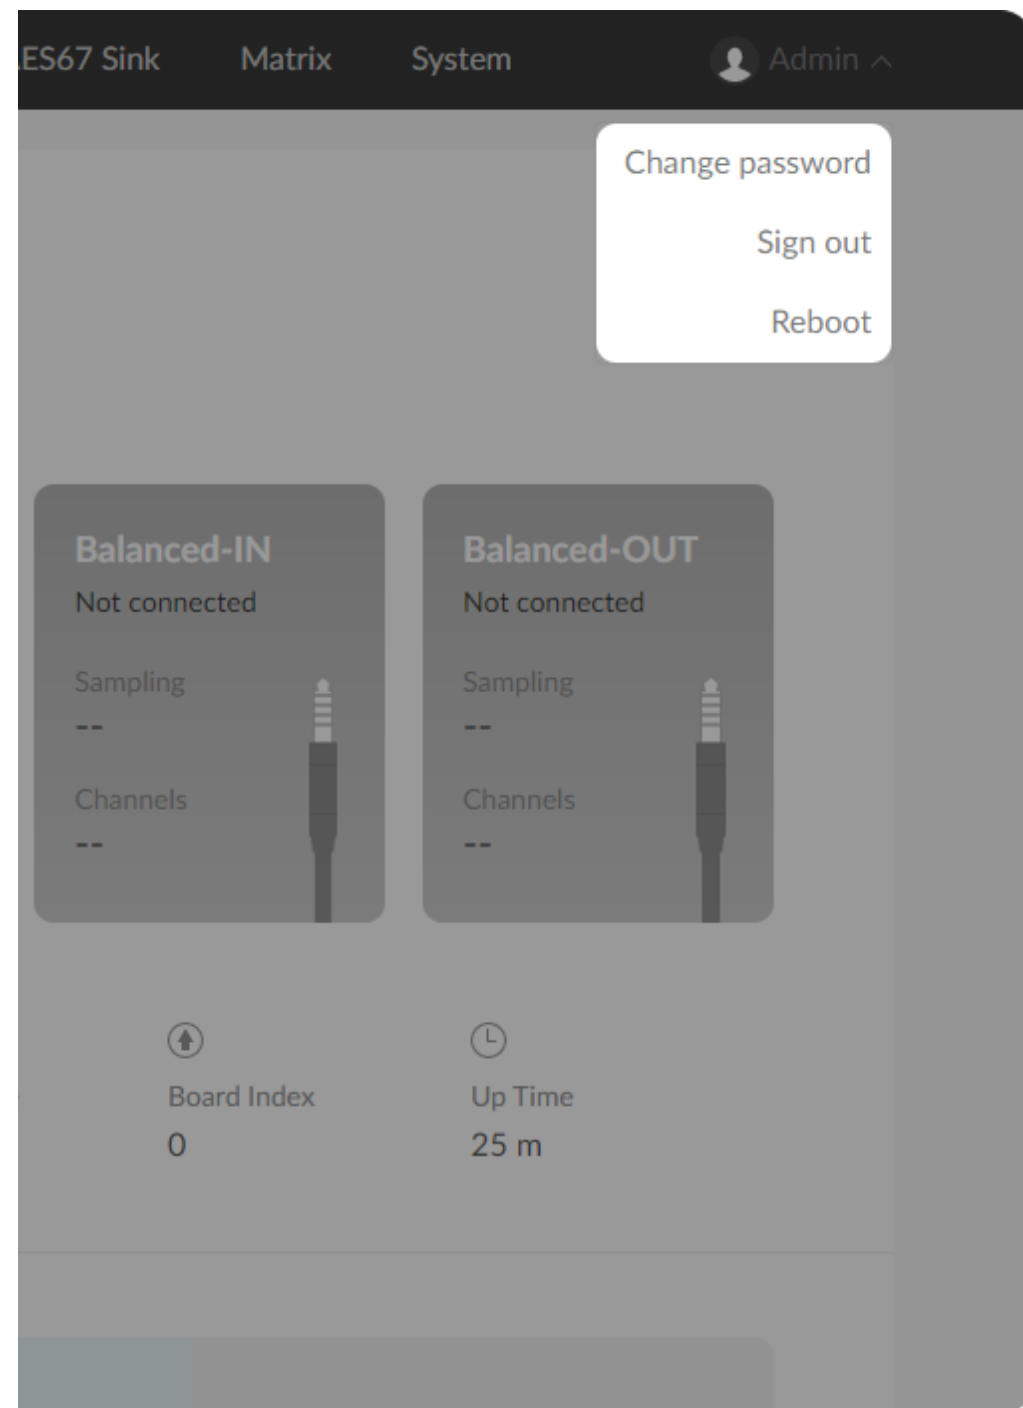


**Signing Out:** click the drop-list icon  behind your username at the top-right of the Web UI, and select **Sign out**.

The **Reboot** function requires administrative rights.


## Dashboard

The Dashboard tab in the web UI can show the real-time status and parameters of the Pro Convert device. Click and enter the **Dashboard** tab to check the device status.

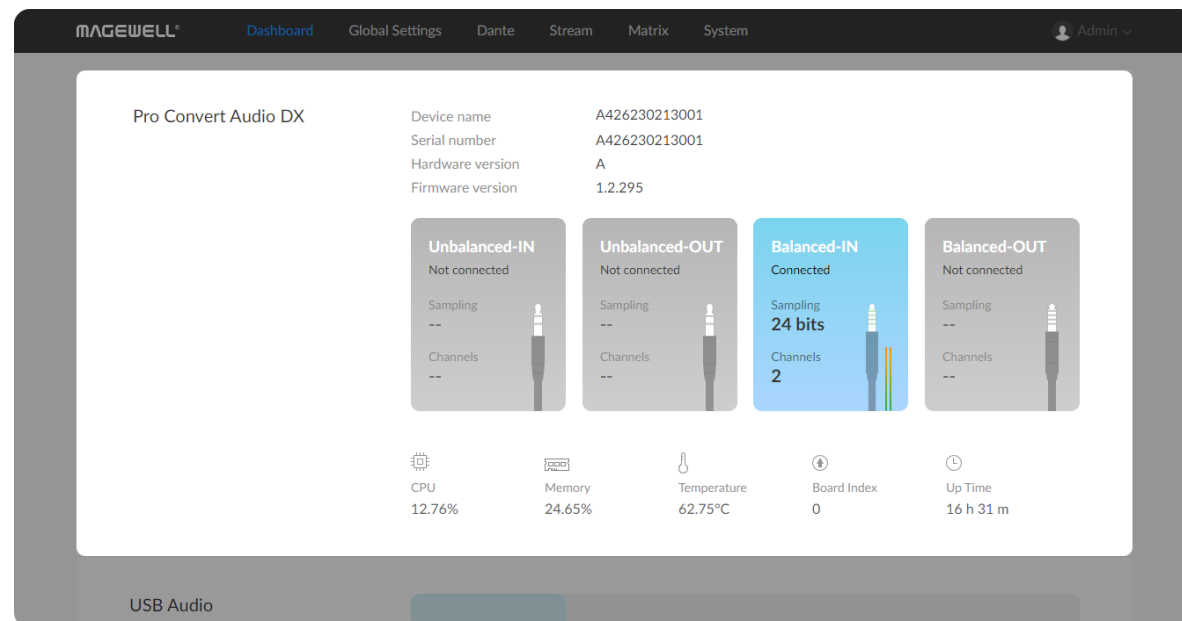

### Checking Basic Information


- **Device name** shows the name of your Pro Convert unit. Only the Administrator can [Setting Device Name](#) in [System > General > DEVICE > Device name](#) tab.
- **Serial number** shows the serial number of your unit marked on the back.
- **Hardware version** shows the hardware version of your unit.
- **Firmware version** shows the current firmware version that's installed in your unit. Administrator can [update the firmware](#) in the [System > Firmware](#) tab.

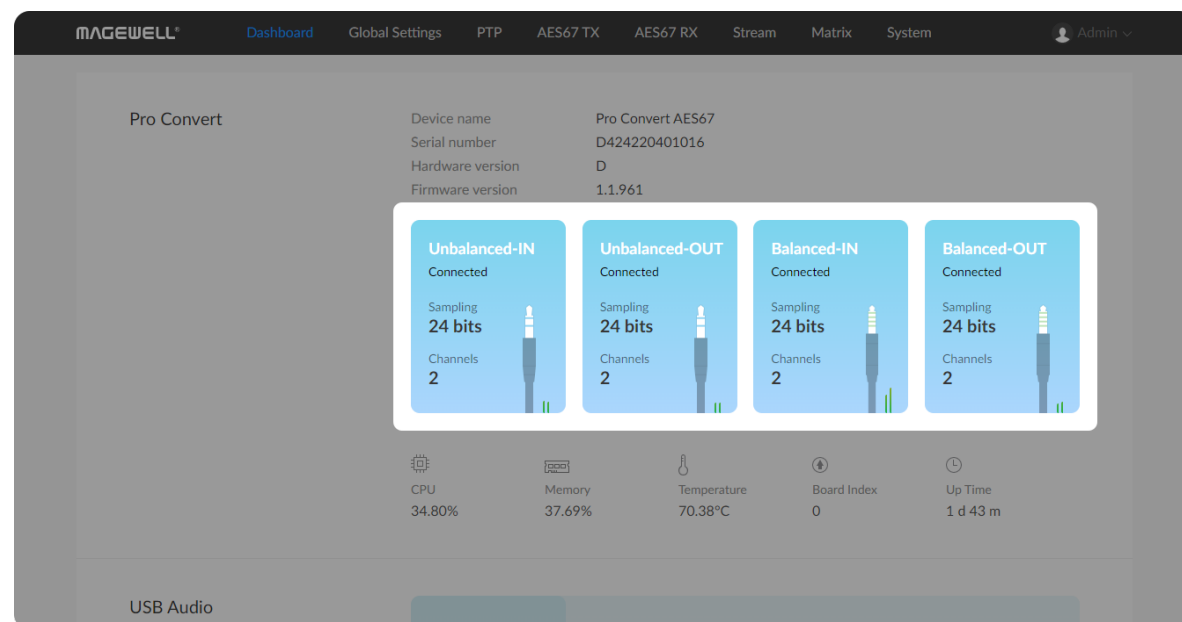

### Checking the Status of Analog Audio Interfaces


Both 3.5mm unbalanced and 4.4mm balanced inputs and outputs are supported. You can connect professional audio equipments with 4.4mm to XLR (also known as cannon) cables, including mixers, XLR microphone, and professional audio recorder.

- The interface card shows whether the audio interface is plugged in.
- If plugged, the card turns blue; otherwise, it is grey.
- Sampling shows the signal sampling rate. 24 bits sample rate is supported now.
- Channels shows the number of channels contained in the signal.

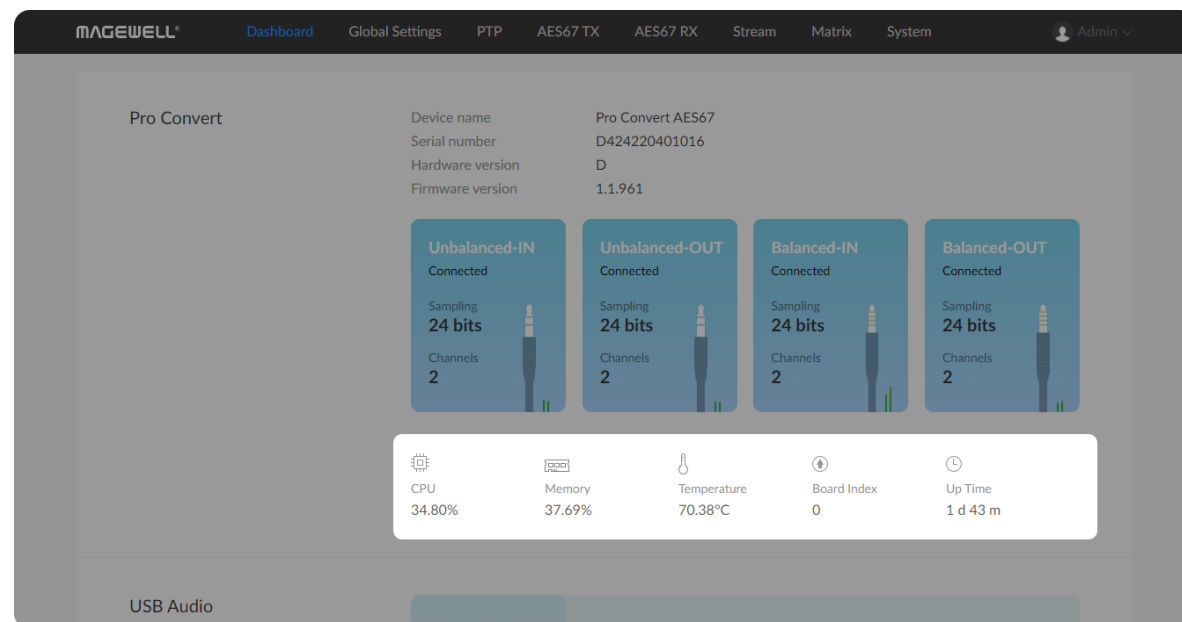

## Checking the Working Status of the Device



- **CPU** shows the current CPU usage (the load on the processor, shown as a percentage) of the Pro Convert device.  
CPU usage increases when the device is handling more complex audio processing tasks (e.g. encoding at higher depth and sample rate).
- **Memory** shows current memory usage.
- **Temperature** shows the current temperature of the unit's processor.  
Keeping the device free from dust and avoiding a high-temperature work environment may help to avoid overheating of the device. If the Temperature is approaching 100°C, please try to lower the temperature by ensuring a supply of cooler air.
- **Board Index** shows the rotary switch number.  
You can change the number on the rotary switch to set a different Board Index.
- **Up Time** shows the elapsed time since your device's last boot-up.

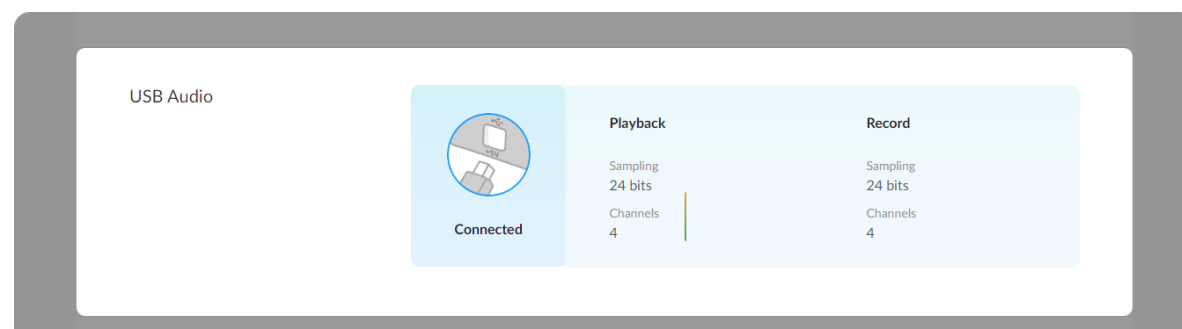

## Checking USB Audio Status

The USB component Audio 1.0 class (48kHz 24bits) supports the Format I type of audio data only.

- **Connection status** shows whether the interface is plugged-in. A sound card is embedded in the USB interface, which provides 1x2/4-channel USB digital audio I/O. You can set the USB audio channel in the [Global Settings > UAC Channels](#).  
The card area will turn blue if plugged, otherwise, it is grey.
- **Playback** shows sampling depth and channels of the USB input signal.

ETHERNET	Connection  1.0 Gbps	IP address 10.10.13.183	Send 10.29 Mbps	Receive 453 Kbps
USB NET	Connection  High Speed	IP address 192.168.66.1	Send 0 Kbps	Receive 0 Kbps

© 2023, Nanjing Magewell Electronics Co., Ltd. All rights reserved.      [Support](#) | [User guide](#) | [License](#) | [Legal](#) | [Warranty](#)

Connected

--

Channels


--

--

Channels

--

ETHERNET

Connection 

1.0 Gbps

IP address

10.10.13.183


Send

10.29 Mbps

Receive

453 Kbps

USB NET

Connection 

High Speed

IP address

192.168.66.1

Send

0 Kbps

Receive

0 Kbps

© 2023, Nanjing Magewell Electronics Co., Ltd. All rights reserved.

Support

|

User guide

|

License

|

Legal

|

Warranty

- **Record** shows sampling depth and channels of the USB output signal.

### Checking Ethernet Status


- **Connection** shows Ethernet network connection status.
- **IP Address** shows Ethernet IP Address. You can manually change it in the **System > Network** tab with administrative rights.
- **Send** shows the current Ethernet transmission speed. Audio DX can generate high bitrate, high quality audio flows. Observing this value will help to guide you in determining how many AoIP streams your LAN can handle.
- **Receive** shows the current Ethernet receive speed.


### Checking USB NET Status

- **Connection** shows USB NET connection status.
- **IP Address** shows USB NET IP Address. By default, it is **192.168.66.1**. You can manually change it in the [System > Network](#) tab with administrative rights.
- **Send** shows current send speed via USB NET.
- **Receive** shows current receive speed via USB NET.

## Global Settings

Click and enter **Globe Settings** tab, then set the parameters that take effect globally.

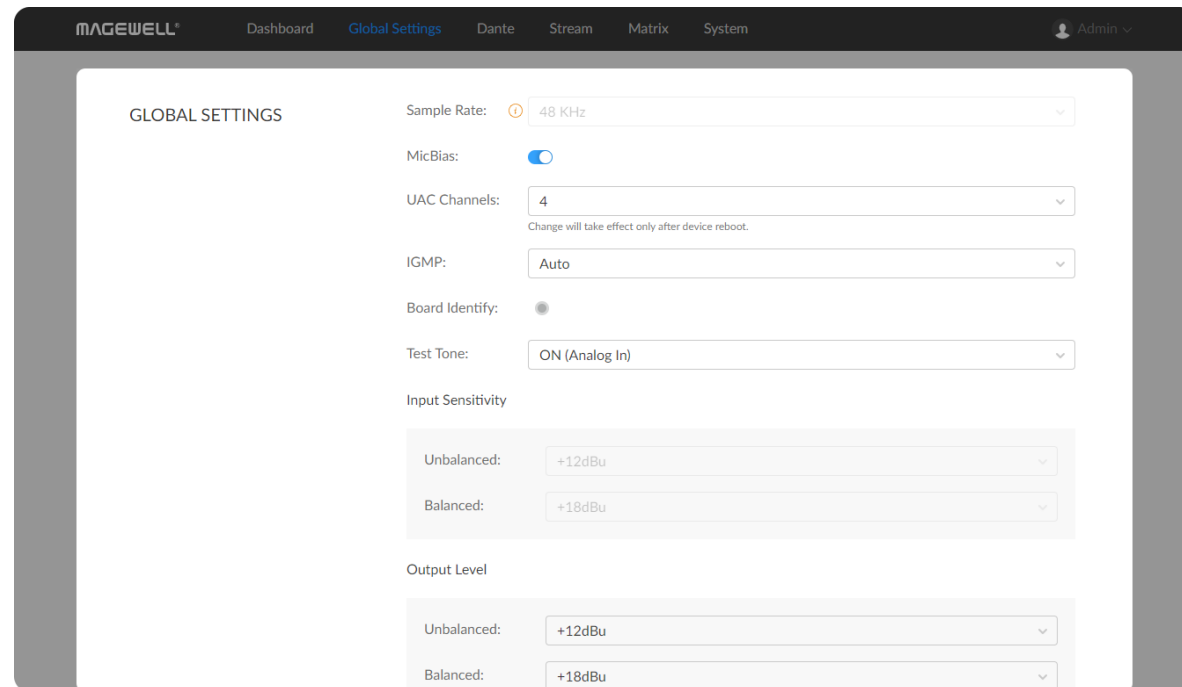

- **Sample rate:** set sample rate for your device in Dante Controller. Your settings in Dante Controller will affect the sample rate of all transmitted and received audio streams. The Audio DX device supports asynchronous resampling, but the change of global sample rate will not affect the USB audio sampling at fixed 48KHz. The modification of Dante Controller will not affect the tasks start running before the modifications.
- **MicBias:** Turn on to power the connected device with 3V. It is turned on by default. And we recommend that it remains on when connecting microphone.
- **UAC channels:** options are 2 and 4 (default) channels. After configuration, the first and third channel will be exacted for the USB sending and receiving. And you need to restart the device to make it effective, and the windows OS users also need to re-add your Audio DX in "Device Manager > Sound, audio and game controllers".
- **IGMP:** specify IGMPv2, IGMPv3 or auto (default).
- **Board Identify:** the indicator located on the AUDIO DX device will flash for 20sec when you click on the icon .
- **Test Tone:** options are OFF (default), ON (Analog In) and ON (Analog Out). When it is set to ON (Analog In), the device will give a 0dBFS 1kHz sine wave in through each of the 4 analog input interfaces. When it is set to ON (Analog Out), the device will give a full (12dBu) 1kHz sine wave out through each of the 2 unbalanced interfaces, a full (18dBu) 1kHz sine wave out




through each of the 2 balanced interfaces.

- **Input Sensitivity:** specify the parameter for both 4.4mm balanced and 3.5mm unbalanced input ports. Input sensitivity is the maximum voltage strength of an input signal that a converter can handle and still produce unclipped full output. This is important to understand because not all audio signals have the same voltage. And when a signal's voltage exceeds the input sensitivity of an amp clipping and distortion may occur. A smaller value brings a higher volume. It is unavailable when **Test Tone** is set to ON (Analog In).
  - For **Unbalanced** input, options are +12dBu(default), +4dBu, +0dBu, -2dBu, 0dBV, and -10dBV.
  - For **balanced** input, options are +24dBu(SMPTE), +18dBu(EBU)(default), +4dBu, +0dBu, -2dBu, 0dBV, and -10dBV.
- **Output Level:** Specify the parameter for 4.4mm balanced and 3.5mm unbalanced output ports. A greater value brings a higher volume.
  - For **Unbalanced** output, options are +12dBu(default), +4dBu, 0dBu, -2dBu, 0dBV, and -10dBV.
  - For **Balanced** output, options are +18dBu(EBU)(default), +4dBu, 0dBu, -2dBu, 0dBV, and -10dBV.


## Dante

Click and enter the **Dante** tab. Then you can monitor Dante configuration. Dante settings needs Dante Controller. Please refer to the [Dante Controller website](#).

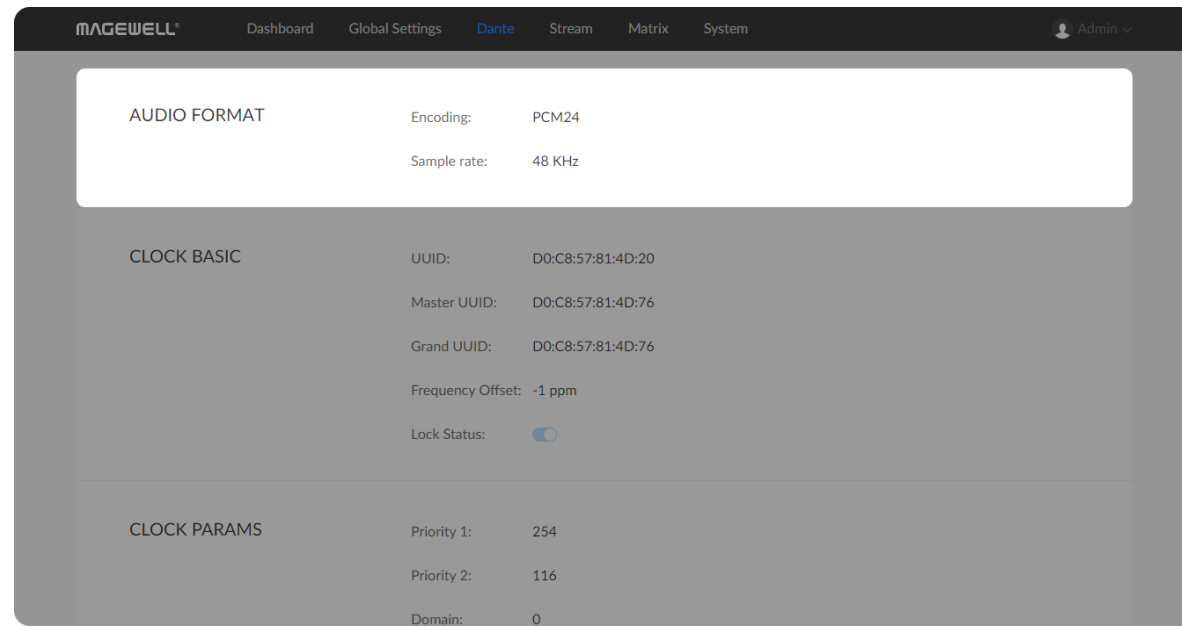

### Checking Audio Format


- **Encoding:** code format of current Dante audio.
- **Sample Rate:** current sample rate of Dante stream, and it should be the same as **Global Settings > Global Settings**.

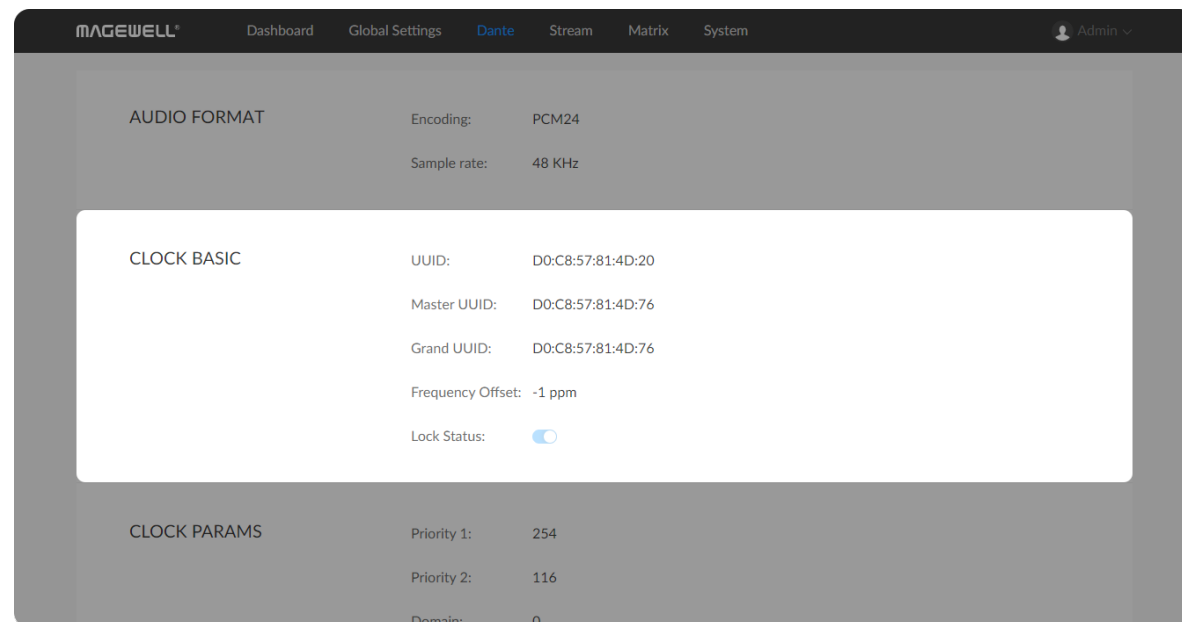

### Checking Clock Basic


PTP, Precision Time Protocol, is a protocol that provides high-precision time and frequency synchronization between devices with submicrosecond precision. It costs low CAPEX and OPEX.

- **UUID** shows Universally Unique Identifier (UUID) of the device.
- **Master UUID** shows UUID of master PTP clock.
- **Grand UUID** shows UUID of Grandmaster PTP clock.
- **Frequency Offset** shows the current frequency offset value, updated in real time.
- **Lock Status** shows whether the device has regained sync with the leader clock.

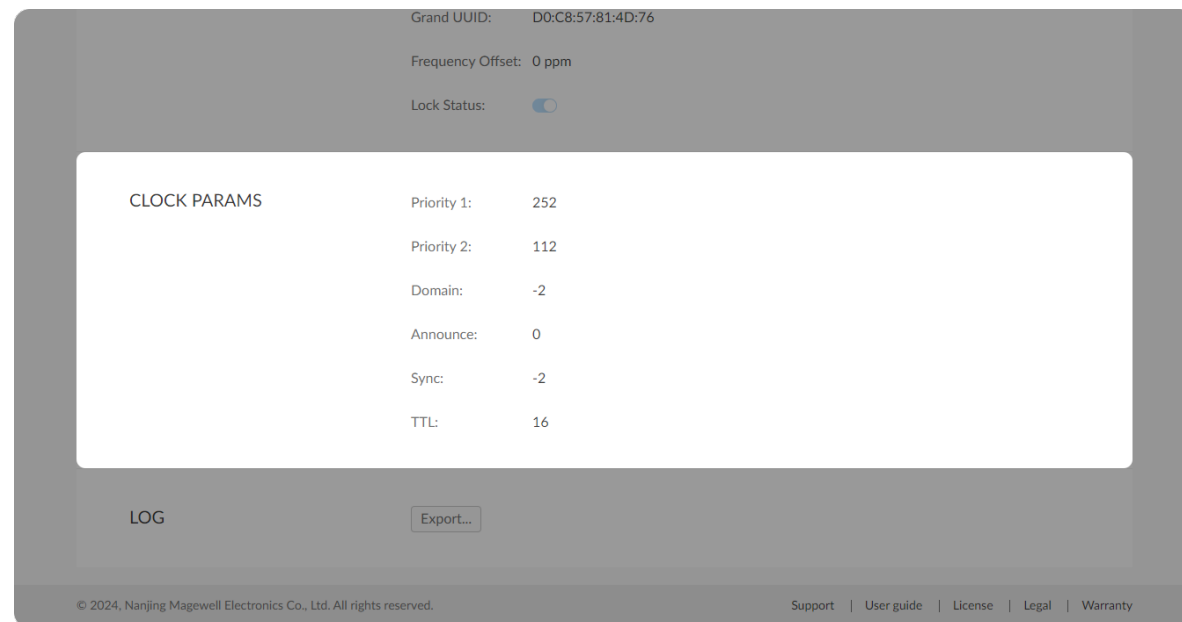

## Checking Clock Parameters

- **Priority 1** shows PTP priority 1 value when advertising the clock. Lower values take precedence.
- **Priority 2** shows the priority 2 value to use when advertising this clock. This value is used to decide between two devices that are otherwise equally matched in the default criteria.
- **Domain** shows PTP domain (domain 0, by default) of your device. Value ranges from 0 to 127. Each domain is completely isolated from other domains and can therefore be seen as different PTP networks.
- **Announce** shows the period for sending announce messages which are used to establish the synchronization hierarchy. This parameter will be 0 when it is a slave clock.
- **Sync** shows the period for sending sync messages from master to slave. This parameter will be 0 when it is a slave clock.
- **TTL**, time to live, shows the limit of the lifespan or lifetime of data in the network.

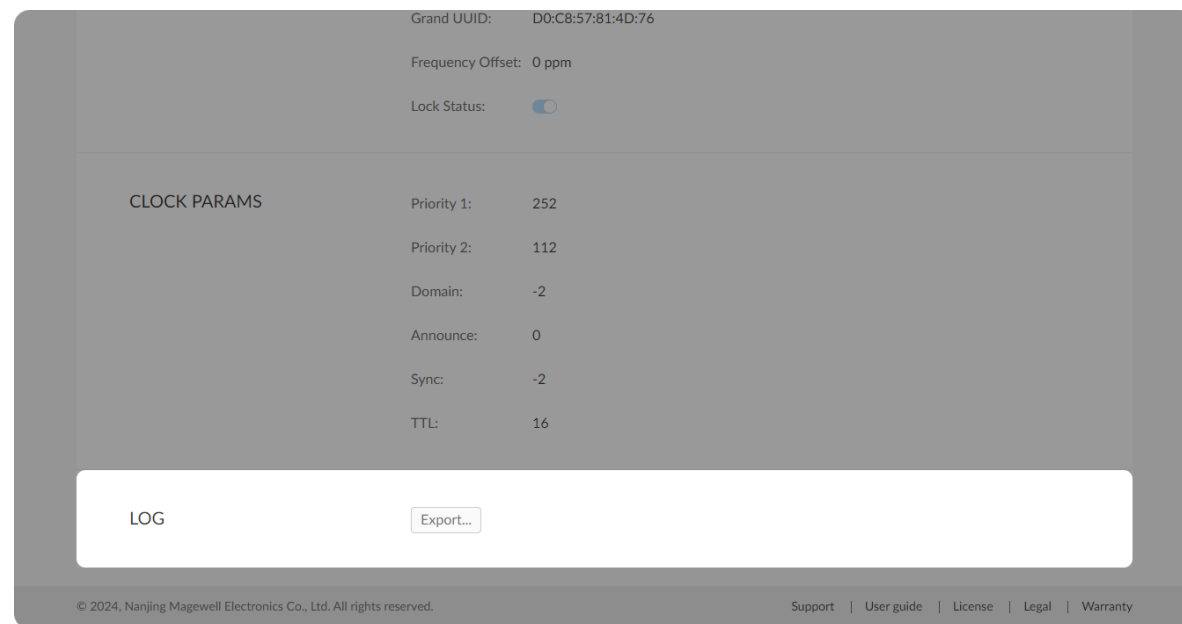


## Exporting logs of Dante Device


1. Go to **Dante > LOG** section, and click on the **Export...** button. A file of logs will be downloaded via the web browser, which can be used for Dante maintenance.

## Stream

Up to 16 sessions are supported for TX/RX each, and you can start 2 TX/RX sessions each simultaneously.

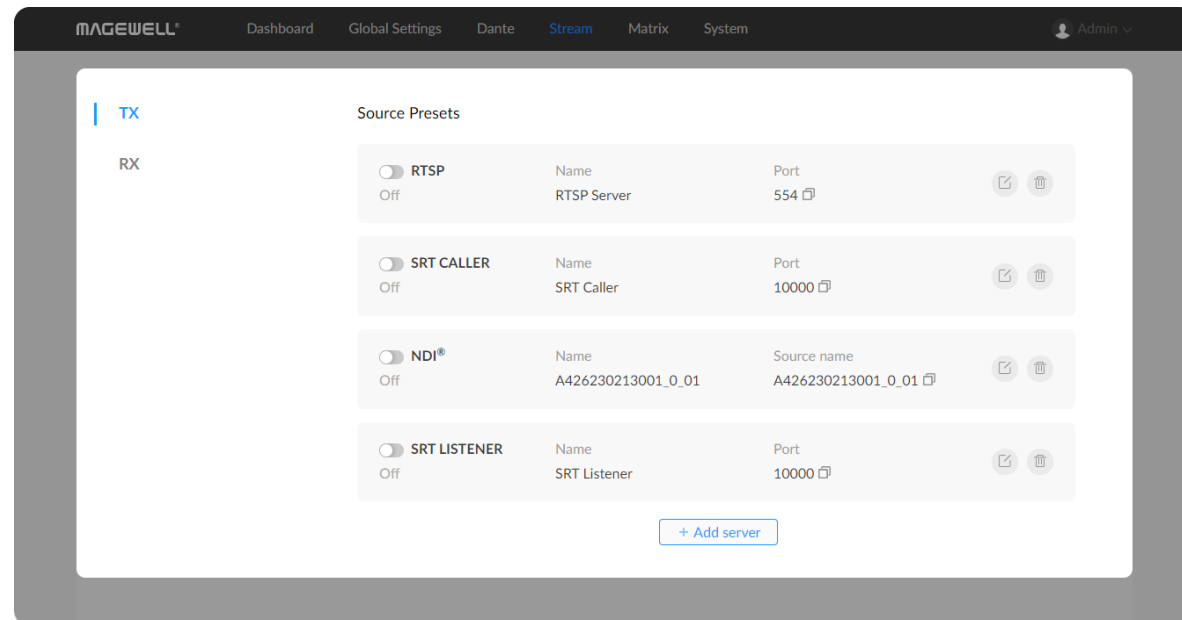

### Modifying a Session

Click the edit  button behind the chosen session, modify specified parameters in the prompted window, and click **Apply** after modification.

### Deleting a Session

Click the delete icon  at the end of the target session line and confirm your delete in the prompt window.

### Starting a Session

Turn on the switch to start the streaming.

### Checking Session Status

You can check the Dante connection status at the Presets list.



The screenshot shows the 'ADD SERVER' configuration window in the MAGEWELL Stream application. The interface includes a top navigation bar with 'Dashboard', 'Global Settings', 'Dante', 'Stream', 'Matrix', and 'System'. The 'Stream' tab is active. The 'ADD SERVER' form contains the following fields and options:

- Name:** A426230213001\_0\_02
- Source name:** A426230213001\_0\_02
- Group name:** public
- Stream:** Stream1 (dropdown)
- AAC Bitrate:** 128 Kbps (dropdown)
- Mode:** Full NDI (dropdown)
- Reference level:** SMPTE (dropdown)
- Transport mode:** UDP (Unicast) (dropdown)
- Discovery server:** Enabled (toggle)
- Server IP:** . . . (text input)
- Failover:** Enabled (toggle)
- Source name:** N/A
- IP address:** N/A
- Change...** (button)
- Web control:** Enabled (toggle)
- Apply** (button)

## Setting NDI® TX Sessions

**Presets** shows saved stream sources, and you can modify any of them.

### Adding/Modifying a Session

Click **Add** or the edit  icon, and set the parameters in the prompt window.

- **Name:** specify the TX session name, which should be 1 to 30 characters and contain A to Z, a to z, 0 to 9 and special characters like \_-#()% .
- **Source name:** specify the TX source name which can be used to identify the signal. It should be unique, 1 to 63 characters long, and contain A to Z, a to z, 0 to 9 and special characters like \_-#()% .
- **Group name:** specify the group which receives NDI stream sent by your converter.
  - The group name is non case-sensitive, and should contain A to Z, a to z, 0 to 9 and special characters like \_-. The group name entry can contain comma-separated values, allowing your converter to send to all the groups listed here.
  - The default group is **public** group.
- **Stream:** Specify the stream channel for the output. Options are stream1 and Stream2. Do not choose the one being occupied now.
- **AAC Bitrate** options are 128Kbps (default), 192Kbps, and 256Kbps. A higher bitrate means better quality but also requires more bandwidth.
- **Mode:** choose Full NDI (default value) when you need high quality NDI streams with a gigabit LAN connection. HX NDI is kind of low bandwidth but high efficiency version of NDI full bandwidth. You can turn on the Logo video switch when mode is set to HX NDI, then the device will add a picture of the Magewell logo to the transmitted audio, generating a video with a resolution of 1920x1080@5fps.

- **Reference level:** Options are SMPTE(default) and EBU.
- **Discovery server**  
 The receiver and sender can automatically discover each other when they are in the same network segment.  
 Turn on the **Discovery server**, and specify the same discovery service IP address for both sender(s) and receiver(s) which can be pinged by each other, then they can be discovered by each other automatically. By default, this function is off.
- **Transport mode:** UDP (Unicast), UDP (Multicast), TCP (Uni-Connection) and TCP (Multi-Connection). Choose a proper one based on your networking conditions. By default, TCP (Uni-Connection) is used.
  - **UDP (Unicast)** indicates that the converter sends a UDP stream directly to the receiver. It is used where lower latency matters. And multiple simultaneous streams will work independently for multiple receivers.
  - **UDP (Multicast)** indicates that the converter sends the UDP stream to a multicast group. It is used for one-to-many broadcast for lower CPU utilization. Parameters in a multicast configuration include:
    - **Multicast IP** ranges from 224.0.0.0 to 239.255.255.255.
    - **Subnet Mask** can be legitimate value ranging from 255.0.0.0 to 255.255.255.0.
    - **TTL**, Time To Live, ranges from 1 to 255. The default value is 4.
  - **RUDP (Unicast)** indicates that the converter sends a reliable UDP stream directly to the receiver. It is the solution to the UDP where data reliability along with confirmation is needed.
  - **TCP (Uni-Connection)** indicates to establish single TCP connection

between the converter and receiver, and transfer all A/V packets are transferred via one port.

- **TCP (Multi-Connection)** indicates to establish multiple TCP connections between the converter and receivers, but transfer packets via different ports.


**Discovery server** : the IP address of the receiver server running discovery service function when **Discovery server** is toggled on.

- **Failover** is a method of protecting your NDI transmission from failure. If the source audio fails, the backup device begins to provide a service. The initial source will be restored after it recovers. This function is disabled by default.

- **Source name** shows the backup NDI channel name.  
Click **Change...** and select the failover (backup) audio device within the same NDI group as the initial source.
- **IP Address** shows the IP Address of the backup NDI channel.  
The failover IP Address is automatically obtained after you select the backup NDI source.

- **Web control**: This function is disabled by default. You may open the Web UI by clicking the gear icon in the NDI Studio Monitor application if this function is enabled.
- **Logo video**: This function is disabled by default. You can turn on the switch when mode is set to HX NDI, then the device will add a picture of the Magewell logo to the audio, generating a video with a resolution of 1920x1080@5fps.
- Click **Apply** to save your modifications.



**Copy NDI TX Stream Name**

Click on the copy icon , then the current stream name is copied successfully.

### Setting NDI® RX Sessions

**Presets** shows saved stream sessions.

- To add an NDI source discovered by the converter automatically
  1. Click **Add**.
  2. Set the following parameters in the **Auto Discover** tab.
    - **External Source:** the IP address of the NDI stream to be received. This IP address should be pinged by your device. Both the IP and your device should be within the same group, that is, the **Group name** must be the same.
    - **Discovery server:** turn on the **Discovery server**, and specify the same discovery service IP address for both sender(s) and receiver(s) which can be pinged by each other, then they can be discovered by each other automatically. By default, this function is off.
    - **Group name:** the group name is non case-sensitive, and should contain A to Z, a to z, 0 to 9 and special characters like `_`-. The group name can contain multiple values with comma separators. The default group is **public**.
    - The auto-detected NDI sources are listed below **Buffer duration**. Select the target stream and click **Save as preset** to add it to the preset list and specify the following settings.
      - **Name:** Specify an alias name (1-64 characters, including A to Z, a to z, numbers and `_-#()%` ) for current preset task. It is NDI by

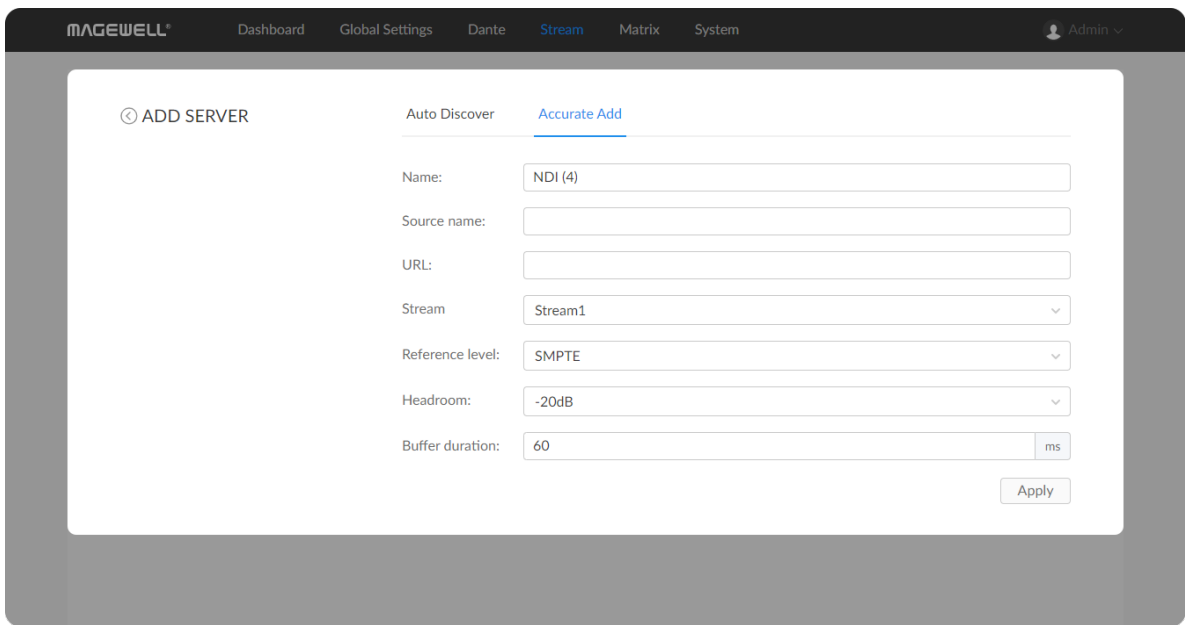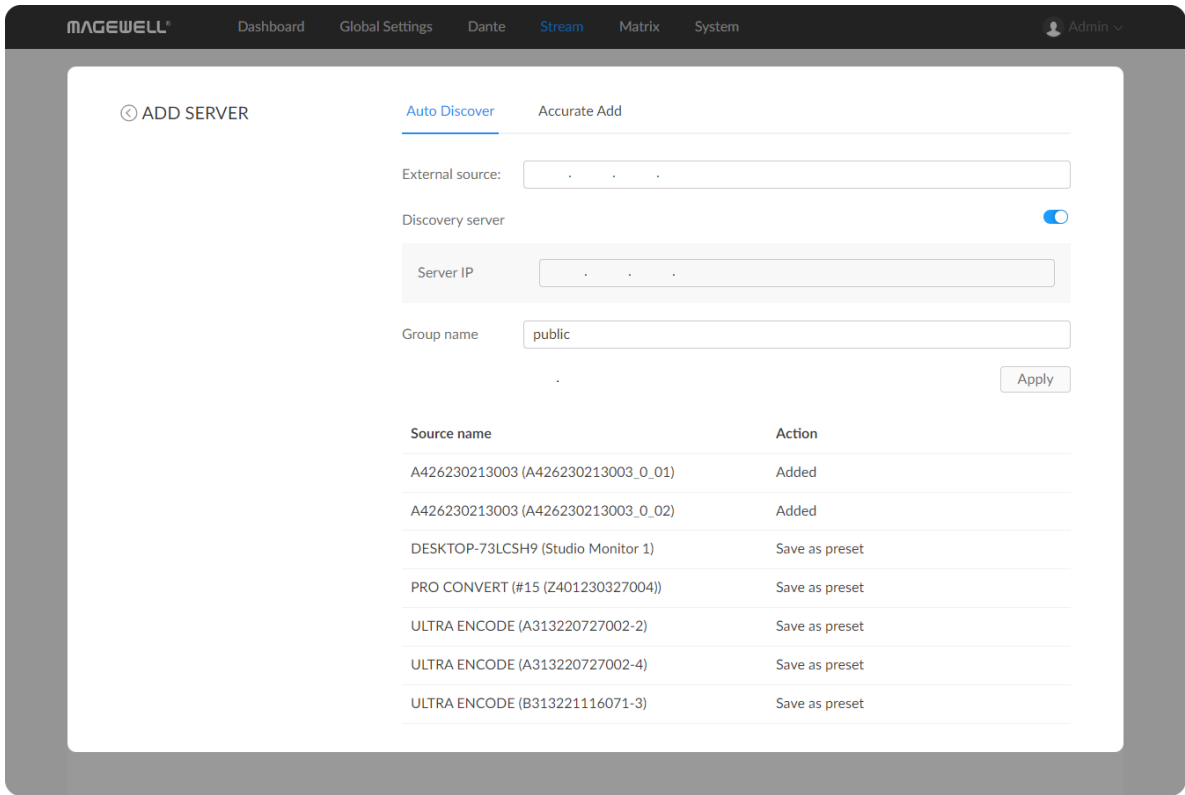

default.

- **Source Name:** shows ndi source name.
  - **URL:** shows the IP address of ndi source.
  - **Stream:** Specify the stream channel for the input. Options are stream1 and Stream2. Do not choose the one being occupied now.
  - **Reference level:** options are SMPTE (default) and EBU.
  - **Headroom:** Options are 0dB, -6dB, -14dB(EBU), and -20dB(SMPTE)(default).
  - **Buffer duration** ranges from 1 to 3000 ms, and the default value is 60ms. We recommend that the buffer time should be longer than current network jitter. Lower buffer settings produce lower latency but will require more resources. Generally, the use of default value is recommended.

3. Click **Apply**.

- To add an NDI source manually
  1. Click **Add**.
  2. Set the following parameters in the **Accurate Add** tab.
    - **Name:** Enter the task name.
    - **Source name:** Enter the source name.
    - **URL:** Enter the stream address of ndi source formed like **ip-address:port**. For example, if you want to add a source named PRO CONVERT (#00 (A409200420003)) 192.168.1.1:5961 to the presets list, fill in the parameter with **192.168.1.1:5961**.



- **Stream:** Specify the stream channel for the input. Options are stream1 and Stream2. Do not choose the one being occupied now.
- **Reference level:** options are SMPTE (default) and EBU.
- **Headroom:** Options are 0dB, -6dB, -14dB(EBU), and -20dB(SMPTE) (default).
- **Buffer duration:** Enter a number between 1 and 3000ms, and the default value is 60ms. We recommend that the buffer time should be longer than current network jitter. Lower buffer settings produce lower latency but will require more resources. Generally, the use of default value is recommended.

3. Click **Apply**.

The screenshot shows the MAGEWELL Stream configuration page. The top navigation bar includes Dashboard, Global Settings, Dante, Stream (selected), Matrix, and System. A user profile 'Admin' is visible in the top right. The main content area is titled 'ADD SERVER' and contains a form with the following fields:

- Name: SRT Caller (2)
- Stream: Stream1 (dropdown)
- Address: (empty text field)
- Port: 8000
- Stream ID: (empty text field)
- AAC Bitrate Kbps: 128 Kbps (dropdown)
- Connect timeout: 3000 ms
- Retry duration: 3000 ms
- Latency: 120 ms
- Bandwidth: 25 %
- MTU: 1500 (range from - to +)
- Encryption: Not Used (dropdown)
- Logo video: (toggle switch, currently off)

An 'Apply' button is located at the bottom right of the form.

## Configuring SRT TX/RX Streams

Set the parameters of SRT Caller or SRT listener TX/RX sessions based on your business planning.

Click and enter **Stream** tab to manage SRT TX/RX streams.

**Presets** shows pre-saved stream sessions.

- **Name:** Specify an alias name for current preset task for your convenience of the presets management, which will be displayed in the presets.
- **Stream:** Specify the stream channel for the input. Options are stream1 and Stream2. Do not choose the one being occupied now.
- **Address:** Enter the Listener address for SRT Caller. If the SRT listener and caller are on the same LAN, enter the private IP address of the SRT listener on the LAN. If the SRT listener and caller are in different network environments, enter the public IP address of the SRT listener.

**ADD SERVER**

Name: SRT Listener (2)

Stream: Stream1

Port: 10000

AAC Bitrate Kbps: 128 Kbps

Connect timeout: 3000 ms

Retry duration: 3000 ms

Latency: 120 ms

Bandwidth: 25 %

MTU: 1500

Encryption: Not Used

Logo video: ☐

Apply

FFmpeg URL: srt://<IP Address>:10000

**ADD SERVER**

Name: SRT Caller

Stream: Stream1

Address: srt://

Port: 8000

Stream ID:

Latency: 120 ms

Encryption: ☒

Passphrase:

Buffer duration: 60 ms

Headroom: -20dB

Apply

- **Port:** Enter the port number specified by the streamer.
- **Stream ID:** Specify Stream ID for a SRT Caller TX/RX session containing 0 to 63 characters. It is a free-form string that follows a format specified by the SRT server; the stream ID on the sender and the receiver must match each other exactly. You can leave it empty if the SRT server has no stream ID.
- **AAC Bitrate** specify AAC bitrate for TX session. Options are 128Kbps(default), 192Kbps, and 256Kbps. A higher bitrate requires a wider bandwidth.
- **Connect timeout:** Enter a number between 1000 and 30000ms. The default value is 3000ms and is recommended to use.
- **Retry duration:** Enter a number between 0 and 10000ms. The default value is 3000ms and is recommended to use.
- **Latency:** Enter a number between 30 and 8000ms. The default value is 120ms. We recommend that the latency here is configured the same as that of the sender.
- **Bandwidth:** indicate the portion of the total bandwidth of a stream required for the exchange of SRT control and recovered packets. Possible value range is 5-100%, and default as 25%. A worse network link condition requires more Bandwidth for overhead transmission.
- **MTU** Maximum Transmission Unit ranges from 0 to 1500. And the default value is 1500.
- **Encryption:** Choose an encryption algorithm from AES-128/192/256, or not used for TX session. Turn on the switch on the receiver if its sender uses a stream cipher.
  - **Passphrase:** Specify a stream cipher for sender and enter the password phrase matches its sender for the receiver.

The screenshot shows the 'ADD SERVER' configuration page for an SRT Listener. The fields are as follows:

- Name:** SRT Listener (2)
- Stream:** Stream1 (dropdown)
- Port:** 10000
- Stream ID:** (empty)
- Latency:** 120 ms
- Encryption:** ☒
- Passphrase:** (password field with eye icon)
- Headroom:** -20dB (dropdown)
- Buffer duration:** 60 ms
- Apply:** (button)

- **Logo video:** Turn on the switch when the target destination receives video embedded audio only, then the device will add a picture of the Magewell logo to the audio, generating a video with a resolution of 1920x1080@5fps. The parameter is available for SRT TX sessions.
- **Headroom:** Options are 0dB(default), -6dB, -14dB(EBU), and -20dB(SMPTE). The parameter is available for SRT TX sessions.
- **Buffer duration:** Enter a number between 1 and 3000ms, and the default value is 60ms. The parameter is available for SRT RX sessions.
- Click **Apply** after configuration.
- You can enable SRT Listener/Caller sessions simultaneously.

The screenshot shows the 'ADD SERVER' configuration page for an RTSP Server. The fields are as follows:

- Name:** RTSP Server (2)
- Stream:** Stream1 (dropdown)
- Port:** 554
- AAC Bitrate:** 128 Kbps (dropdown)
- Connections:** 1 (range 1 to 8)
- Main key:** mainstream
- Authentication:** ☒
- User name:** (password field)
- Password:** (password field with eye icon)
- Logo video:** ☒
- Apply:** (button)

At the bottom, the RTSP URL is displayed: `rtsp://<User name>:<Password>@10.10.13.216:554/mainstream`

## Configuring RTSP TX Sessions

Click and enter **Stream > TX** tab.


**Presets** shows saved stream sessions.

- **Name:** specify a session name.  
The range is from 1 to 32 characters including A-Z, a-z, 0-9 and \_-.
- **Stream:** Specify the stream channel for the output. Options are stream1 and Stream2. Do not choose the one being occupied now.
- **Port:** enter the port number of RTSP service.
- **AAC Bitrate:** specify bitrate for transmitting RTSP data.
- **Connections:** 1 to 8 connections are supported.
- **Main key:** specify key for the main stream, mainstream by default.
- **Authentication:** turn on to specify the user name and password and you need to set the same account for RTSP receiver.

- **Logo video:** turn on the switch when the target destination receives video embedded audio only, then the device will add a picture of the Magewell logo to the audio, generating a video with a resolution of 1920x1080@5fps.
- Click **Apply** after configuration.





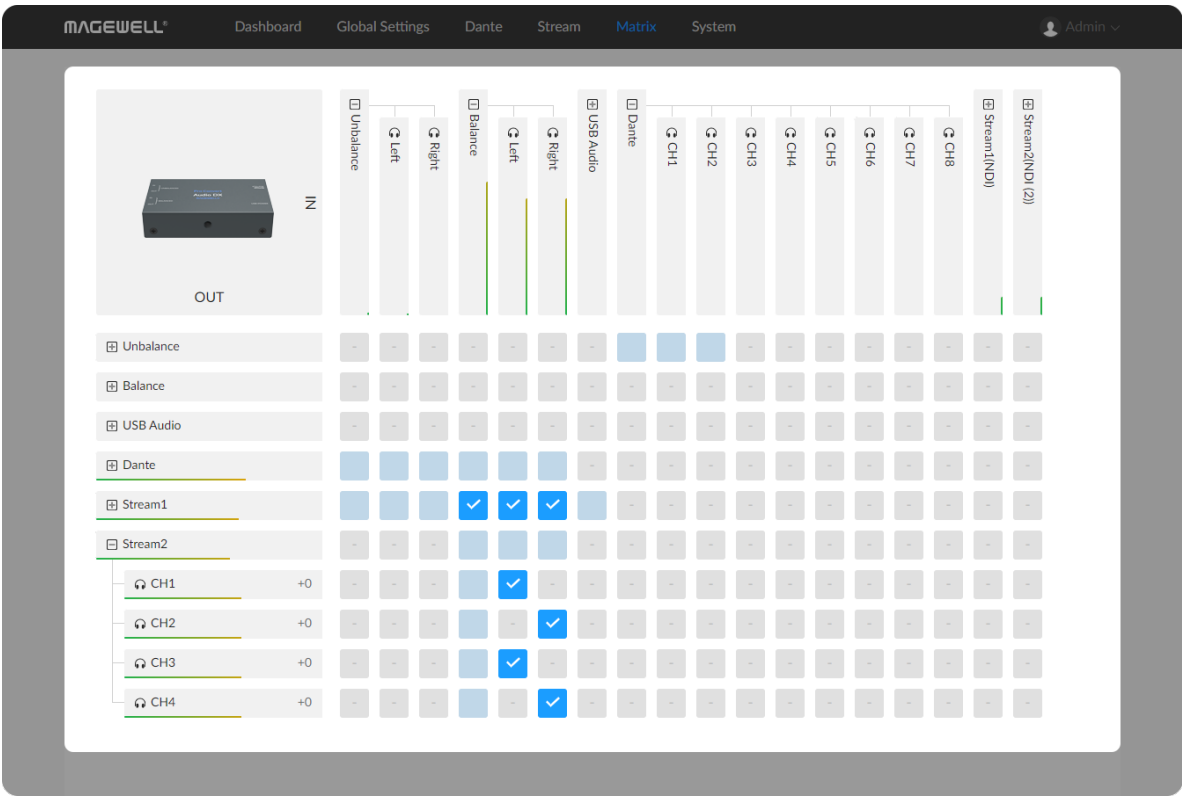



## Matrix

In audio **Matrix** tab, you can find a switching matrix for selectively connecting incoming signals to desired output paths. The advantage of the audio switch table result in a very simple and visual way for you to manage routing or mixing of any analog, digital, and IP-based input channels to any outputs.



### Description of the Matrix Table

The table supports two dimensions, with all kinds of inputs on the horizontal axis and all kinds of outputs to be delivered on the vertical axis. We must distinguish between an IN and an OUT. An input can be chosen by multiple outputs. And when you check the crosspoint, it means that the output channel will deliver the corresponding input audio stream.

- Click the  icon to expand all channels of the chosen stream.
- Click the  icon to hidden the channels.
-  indicates the in and out channel are idle.
-  indicates the input stream/channel will be delivered to the output channel directly.
-  indicates the inputs will be delivered to the output after audio gain adjustment.
-  indicates the input is muted, and it will not be part of its output.
-  indicates part of the input is chosen, instead of all channels.
-  indicates the device is connecting the input stream.

### Note

- Mutual conversion relationships of Unbalanced, balanced, USB audio, Dante, Stream1 and Stream2 are listed in the routing matrix table.

- You can specify the audio data of in and out Stream1 and Stream2 in **Stream RX/TX** tab.
- You can specify and mix the inputs for every output channel.
- Support selecting any input or output channel for mixing.



## Mixing


Audio mixing is the process of optimizing and combining multitrack channels into a mono, stereo, or any other end product.

1. Expand an **OUT** flow and click on an channel to open **Mixing Console** window.
2. Choose a **Mixed Output** flow.
3. Choose a **Channel** from the contained channels of the chosen flow.
4. Adjust volume gain for each **INPUT** and **OUTPUT** channel or even mute it.

## System

With administrative rights, you can access the **System** tab to control more functions, such as:

- Setting device name, Joining Magewell Control Hub, and modifying date time
- Network settings for joining a specific LAN
- Set remote control platform
- Updating firmware for the latest features and improvements
- Creating or removing general user accounts for accessing the converter
- Changing passwords for all users
- Exporting logs to get technical support
- Rebooting or resetting the converter to fix problems

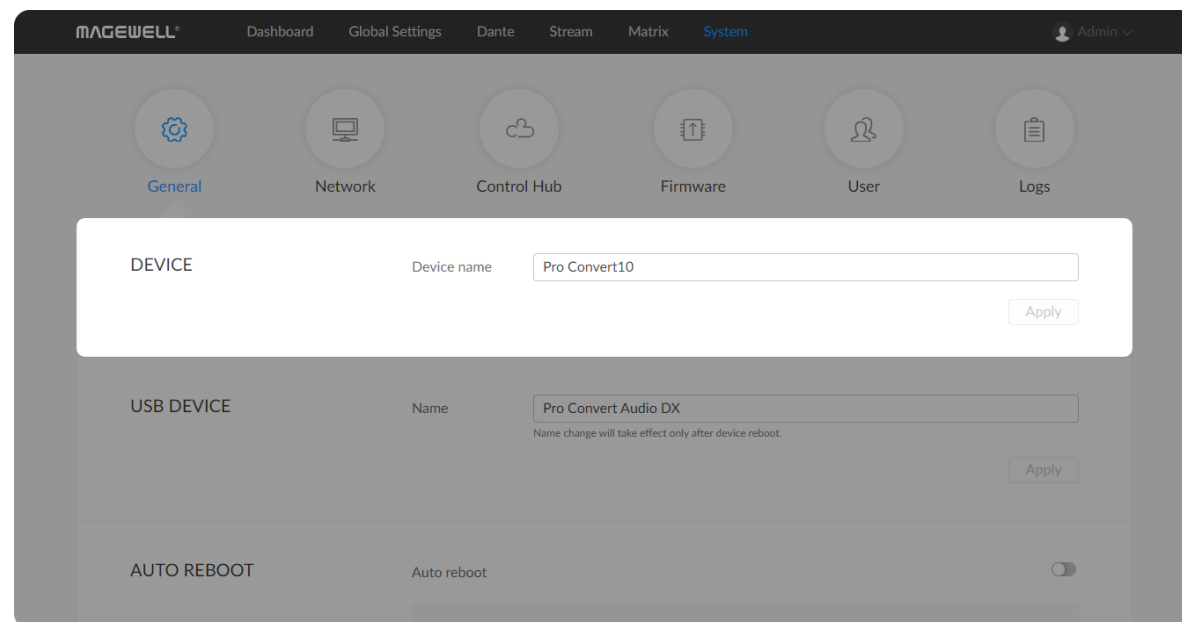


### Setting Device Name

Changing device name in the **System** tab requires administrative rights.

By default, the device name is the same as the product model name.

1. Access the Web UI, and sign in as an Administrator.
2. Click and enter the **System > General** tab.
3. Enter a new **Device name**. The device name is a string of 1 to 30 non-case sensitive characters, containing letters a to z, A to Z, 0-9, spaces and special characters like \_-+.
4. Click **Apply** to save your change.

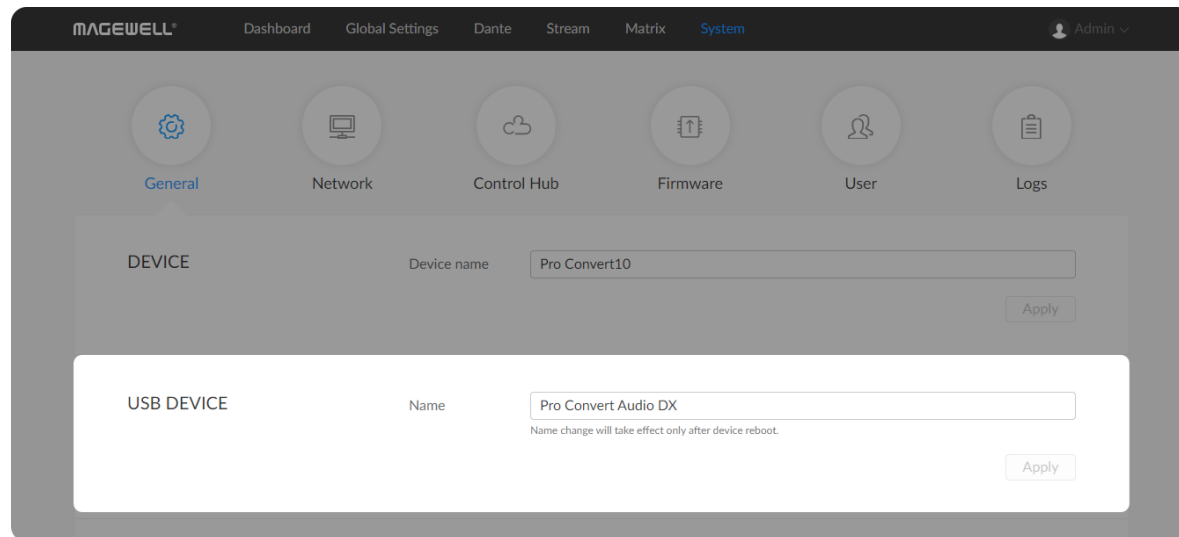

## Changing the USB Audio Device name

Changing the USB audio device name requires administrative rights. By default, the USB device name is the same as the product model name.

1. Access the Web UI, and sign in as an Administrator.
2. Click and enter the **System > General** tab.
3. Enter a new **Name** in USB DEVICE section. The device name is a string of 1 to 30 non-case sensitive characters, containing letters a to z, A to Z, 0-9, spaces and special characters like \_-+.
4. Click **Apply** to save your change.

USB device name change will take effect after rebooting.

Windows OS users need to re-add the Audio DX converter in "Device Manager > Sound, audio and game controllers".



## Importing/Exporting Settings

Importing and exporting configurations for the "Global Settings", "Stream", and "Matrix" tabs of devices are supported.

1. Access the Web UI, and sign in as an Administrator.
2. Click and enter the **System > SETTING MANAGEMENT** section.
3. Click on **Export**, and a .mw file containing the device's "Global Settings", "Stream", and "Matrix" configurations will be saved to the browser's download path.
4. Click on **Import**, select a .mw file to import into your device. The import operation will cause the device to restart automatically. After the restart, please log in and verify that the configurations on the "Global Settings", "Stream", and "Matrix" tabs are correct.



AUTO REBOOT

Auto reboot

Weekly

☐ Monday
 ☐ Tuesday
 ☐ Wednesday
 ☐ Thursday
 ☐ Friday
 ☐ Saturday
 ☐ Sunday

Reboot Time

15

:

18

Apply

ACCESS TOKENS

Access token	Owner	Expiration date	Action
WG8wQ4sKbYYz*****R3mdS7C2XbHk	Admin	Unlimited	
RMiGyAKhYhSx*****Kcp8KCzn5DA	111	Unlimited	

Add

DATE & TIME


Current time 1970-01-01 08:06:48

## Scheduling Auto Reboot

Set up a restart schedule for your device.

By default, Auto Reboot is disabled.


1. Access the Web UI, and sign in as an Administrator.
2. Click and enter the **System > General** tab.
3. Turn on the **Auto reboot** switch in AUTO REBOOT section.  
Specify the weekday and time for your reboot schedule. Then your device will auto reboot weekly.
4. Click **Apply** to save your change.

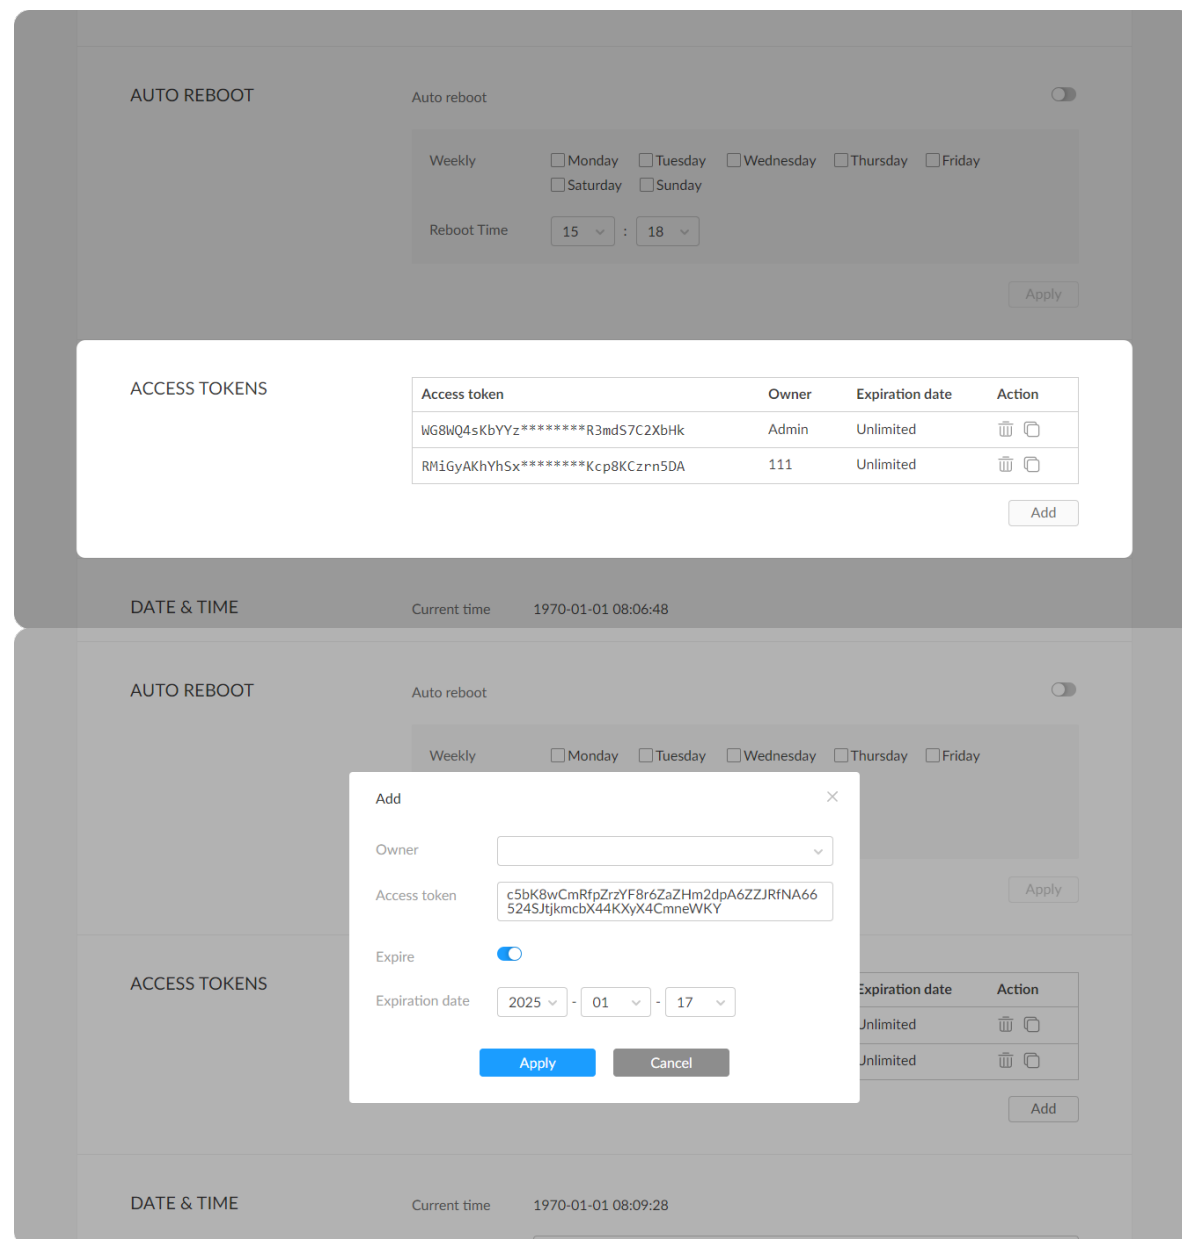

## Setting TOKENS


The equipment supports granting authorization to specified users through TOKEN, allowing them to access APIs without logged-in. General users are unable to access system setting APIs, while administrator users have access to all APIs.

1. Access the Web UI, and sign in as an Administrator.
2. Click and enter the **System > General** tab.
3. Click **Add** in the ACCESS TOKENS section, and specify the Owner (Admin by default), Access token (64 characters containing A-Z, a-z, 0-9), and Expiration date.
4. (Optional) Click the icon to delete the Token. And click the icon to copy the Token.
5. Click **Apply** to save your change.

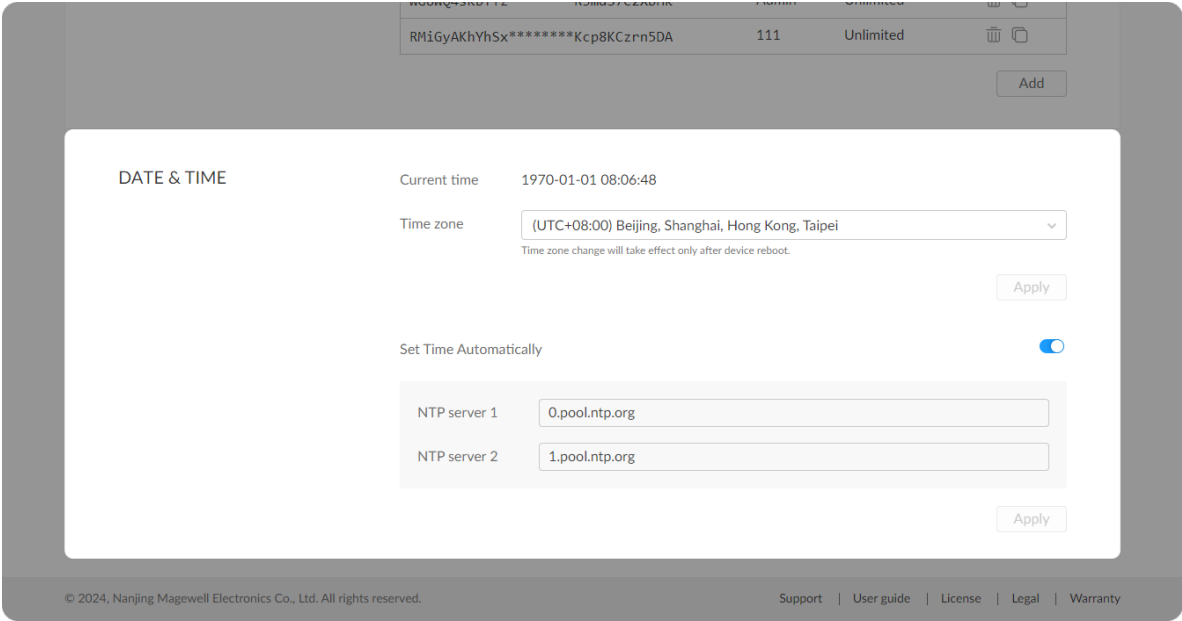

Setting Date & Time

1. **Time zone:** specify a time zone for your device and click **Apply** after configuraion.
2. **Set time automatically:** turn on **Set Time Automatically**. Then the device's time will synchronized to the world-time servers depending on the timezone you set. Otherwise, you can set time manually. Click **Apply** after configuraion.
  - **NTP server 1:** the default server is 0.pool.ntp.org.
  - **NTP server 2:** the default server is 1.pool.ntp.org.


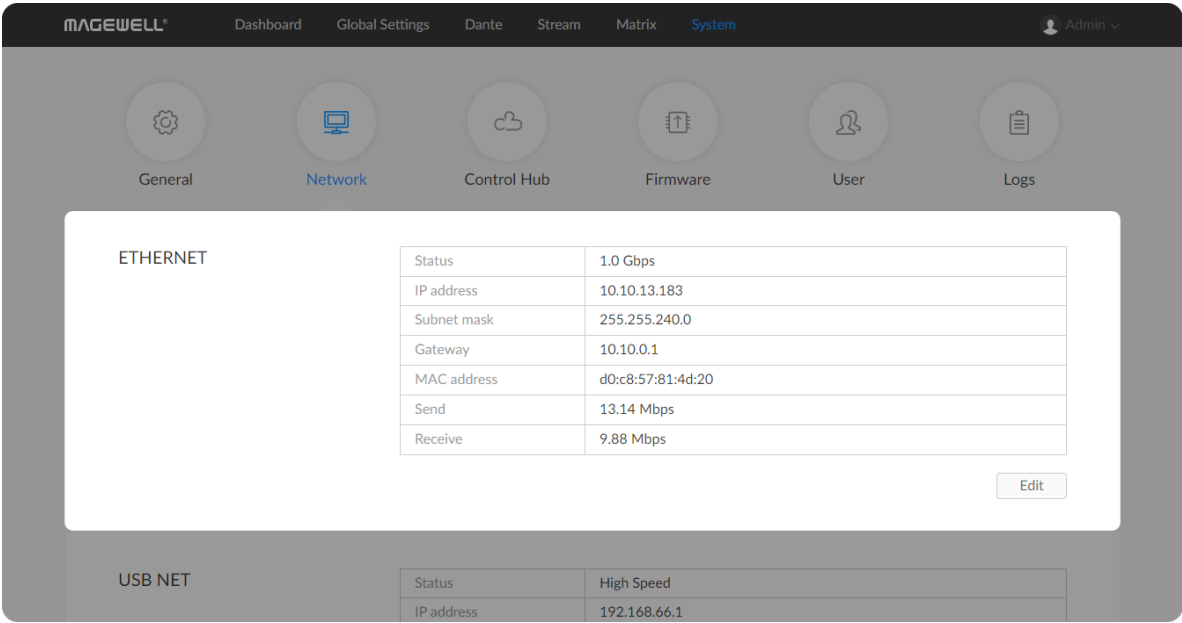


Network Settings

Changing network connections in the **System** tab requires administrative rights. By default, the Pro Convert unit automatically detects any connected network. You can set a static IP Address if the device failed to auto-configure using DHCP. If multiple devices are connected using USB NET, change the IP address according to your own arrangement.

Setting Ethernet IP Address


1. Click and enter the **System > Network > ETHERNET** section.
2. Click **Edit**.
3. Turn on **Set IP Address Manually**, then enter a new **IP address**, **Subnet mask**, and **Gateway**.
4. Click **Apply** to save changes.
5. Verify: Type the IP address in your web browser and confirm the Web UI can be accessed.

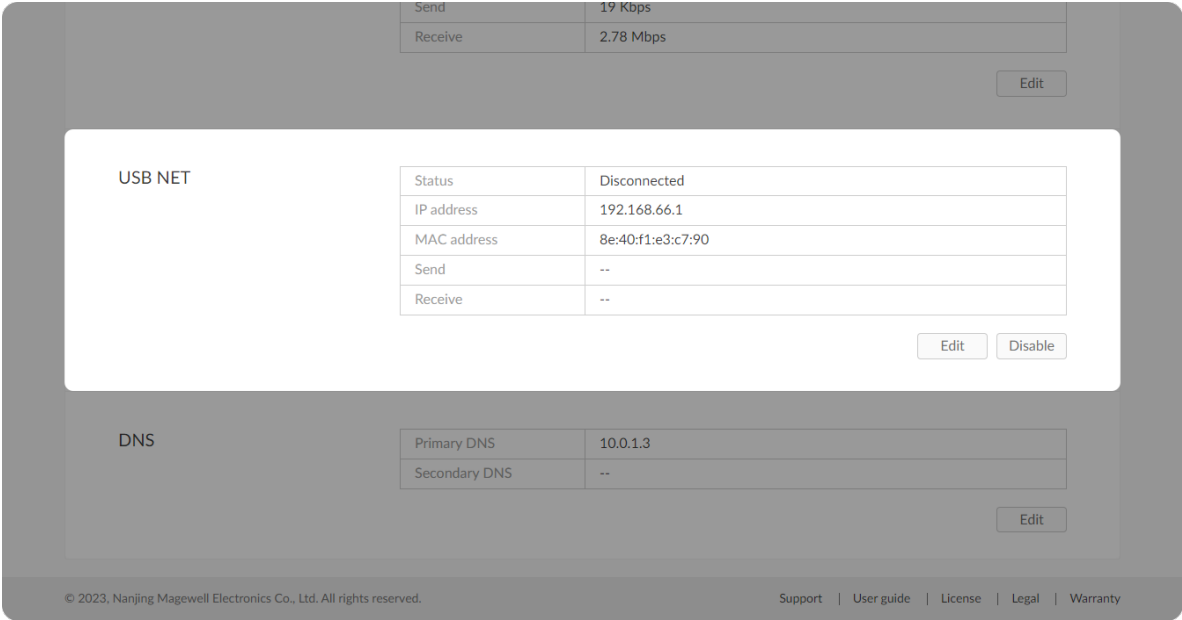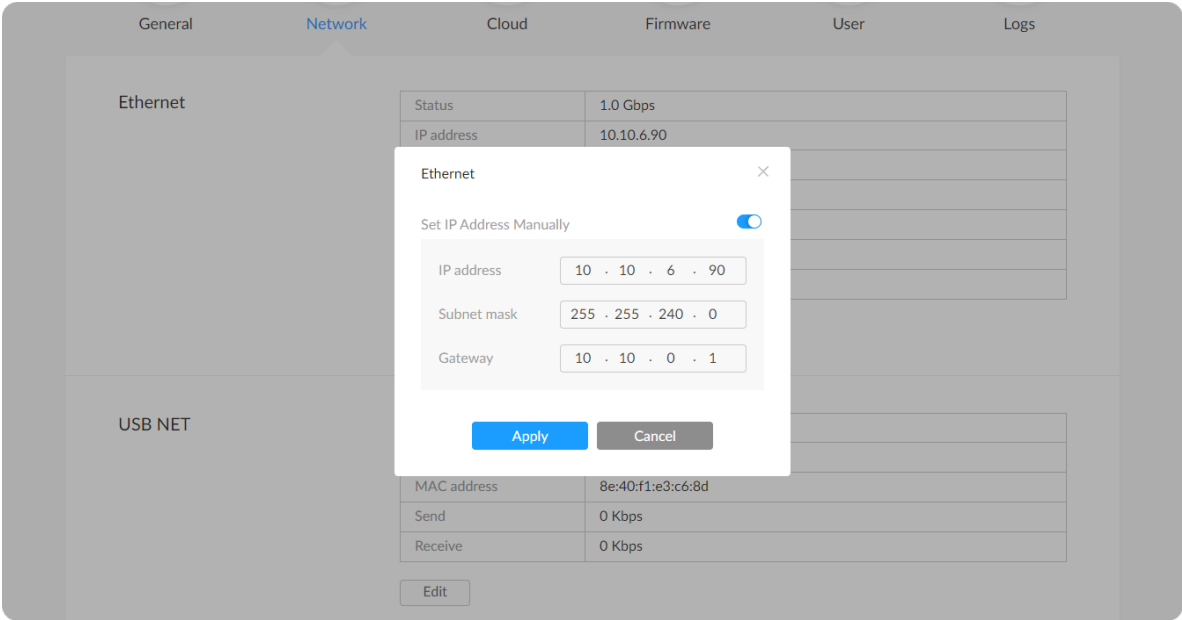

Setting USB NET


Note:

- Using of default USB NET IP address is recommended unless there is a conflict on your LAN.
  - Do not connect more than one converter simultaneously to one system while using USB NET.
1. Click and enter the **System > Network > USB NET** section.
  2. Click **Edit**.
  3. Enter a new **IP address** for USB NET.
  4. Click **Apply** to save changes.
  5. Type the manually set IP address in your web browser to access the Web UI, verifying if the network settings work.
  6. Click **Disable** to stop accessing device WebUI via USB NET (192.168.66.1 by default).

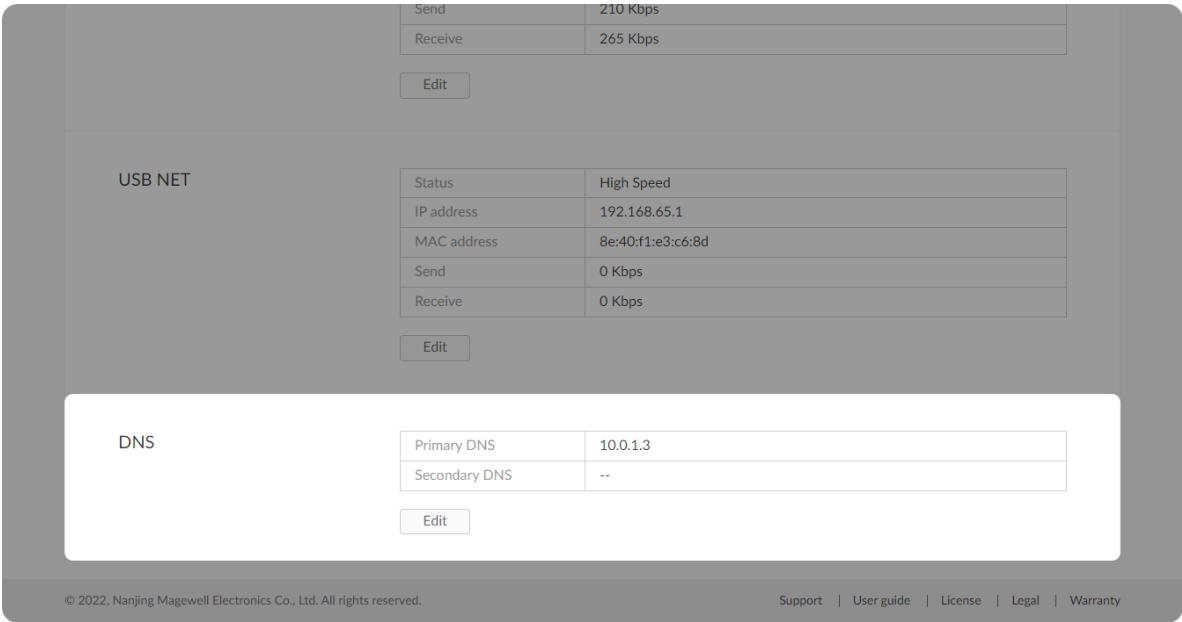

Setting DNS


1. Click and enter the **System > Network > DNS** section.
2. Click **Edit**.
3. Turn on **Set DNS Manually**, then enter a new **Primary DNS**, and **Secondary DNS**.
4. Click **Apply** to save changes.

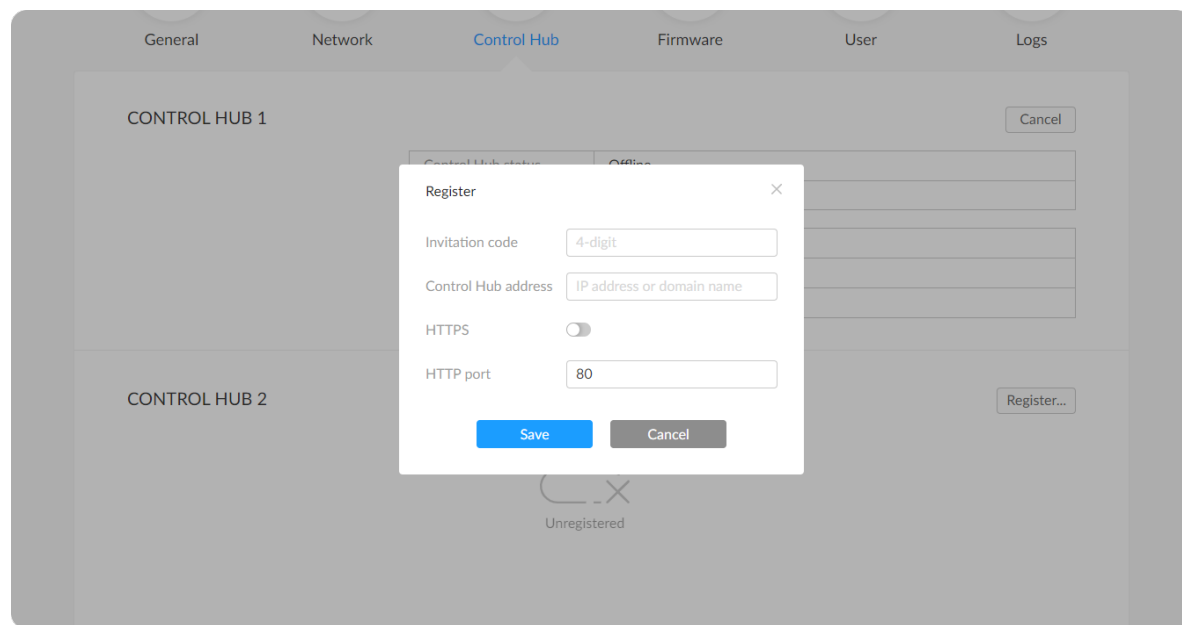

## Control Hub

You can apply for remotely control using Magewell Control Hub. 2 cloud platforms are supported simultaneously, Control Hub 1 and Control Hub 2. You can go to [the official website](#) to learn about Magewell Control Hub.

- Click **Register...**: and input parameters in the prompt window. And save after configuration.
  - Invitation code**: a 4-digital numbers security code obtained from Magewell Control Hub. If not leave it empty.
  - Control Hub address**: input IP address or domain name of Control Hub.
  - HTTP port**: input HTTP port number, which should be consist with that of Control Hub.
- Click **Deregister** to log out from the Magewell Control Hub.

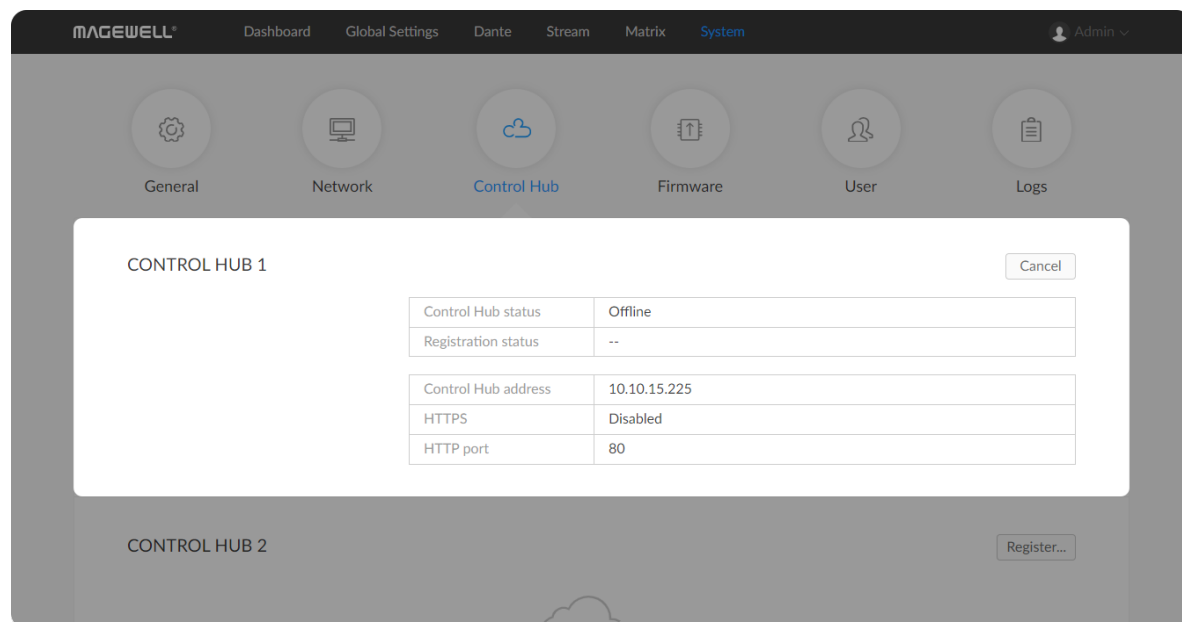


Check parameters related to Control Hub management.

- Control Hub status: Online or Offline.** Online indicates that the communication between device and Control Hub platform goes well. On the other hand, Offline indicates the communication is interrupted.
- Register status:** shows current status of cloud-join permission, including
  - Incorrect invitation code: you need to change your registration with correct code.
  - Waiting: registration is successfully submitted to Control Hub platform.
  - Approved: registration is approved. This device can be remotely controlled.
  - Rejected: Registration is denied.
  - Deleted: Registration is deleted, you can re-apply for joining the Control

Hub.

- **Control Hub address:** shows the IP address of Control Hub.
- **HTTP port:** shows the HTTP port of device used to communicate with Control Hub.

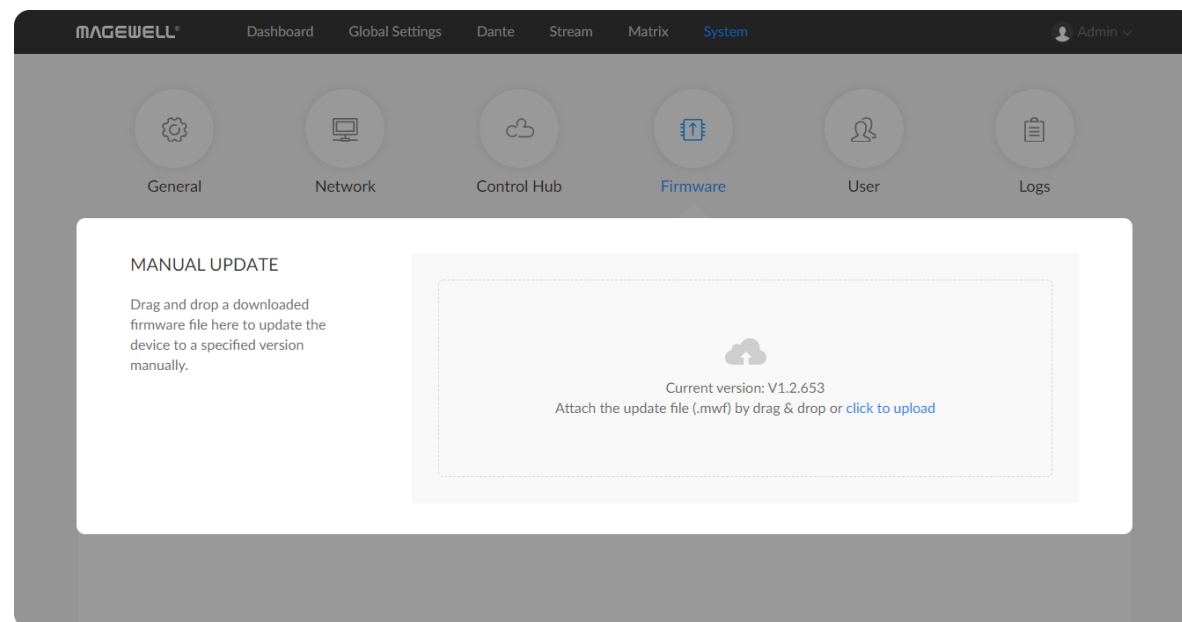


## Updating the Firmware

To update the firmware via the **System** tab requires administrative rights.

Note: Currently online update is not supported.

1. Click and enter the **System > Firmware** tab.
2. Click on **click to update** to select the **.mwf** firmware update file from your local storage, or just drag and drop the file from your computer into the upload zone.
  - You can download the Pro Convert firmware package from the Downloads section of the Magewell website: [www.magewell.com/downloads/pro-convert](http://www.magewell.com/downloads/pro-convert).
  - The device will automatically verify the update file.
  - The unit will upload the file after the file verification is passed.
3. In the **Manual Update** window, click **Update**.
  - Note that DO NOT shut down or reboot the device when updating firmware.
  - The changes will take effect after you reboot the device.
4. Check the current **Firmware version** in the **Dashboard** tab.
  - The **Firmware version** should have changed to show the number of the new update.



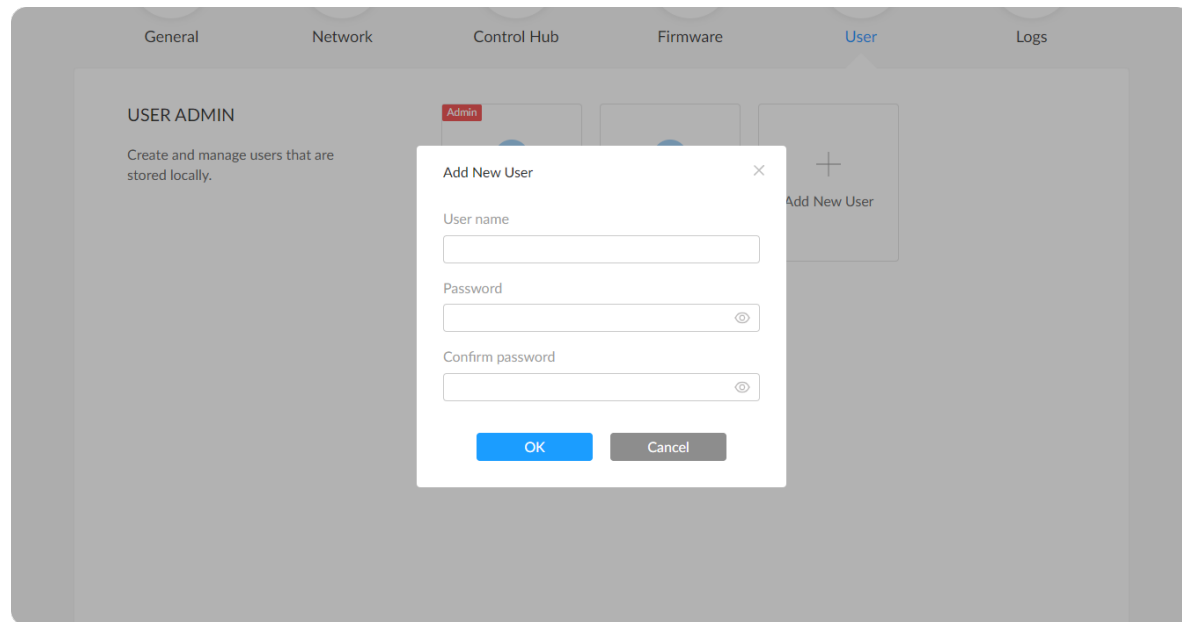

## User Admin


Administrator is allowed to perform the following tasks. The **User Admin** tab is invisible when you log in as a general user.

- [Create/Remove General User Accounts](#)
- [Modify User Password](#)

## Creating/Removing General Users

After signing in with default admin account, you may need to add general users to give them permissions to monitor the device, or set parameters.


1. Click and enter the **System > User** tab.
2. Click **Add New User**.
3. Type in the user name, password, and confirm your password.
  - The username is a string of 3 to 12 characters, which contains the letters A-Z, a-z, numbers 0-9 and underline.
  - The password is a string of 1 to 32 characters, which contains the letters A-Z, a-z, numbers 0-9 and special characters \_-~!@#\$%^&\*~+=.
4. Click **Apply**.
5. Repeat Step 3 to 5 to add multiple users.
  - Converters support the addition of up to 15 general users.
6. To delete a user, move the cursor to the user name you want to delete, then click the delete button "X" appeared at the top-right corner. Confirm the deletion when prompted.

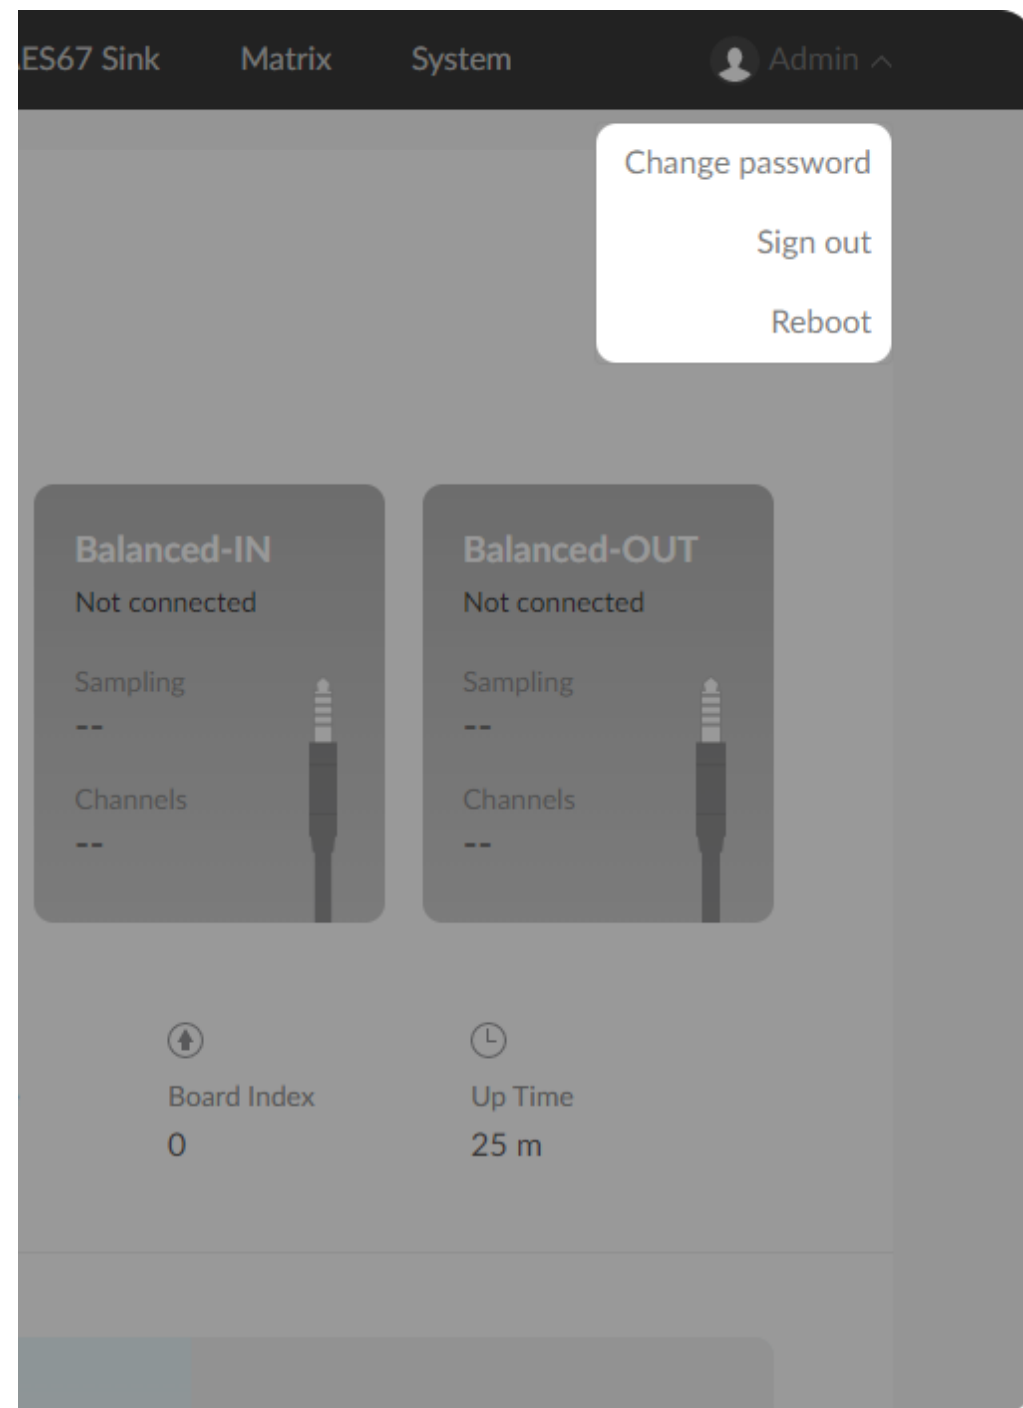


## Setting Password

After login, You can either set up user password [via the user account drop-list](#) , or [in the System > User tab](#) (with administrative rights).


### Solution 1: via the user account drop-list

1. Access the Web UI, and sign in with your username and password.
2. Click the down arrow icon  beside the logged-in username, and click **Change password** in the drop list.
3. In the prompt window, type in your old password, the new password, and confirm your new password. The password is a string of 1 to 32 characters, which contains letters A-Z, a-z, numbers 0-9 and special characters `_~!@#$$%^&*-=.`
4. Click **Apply**.

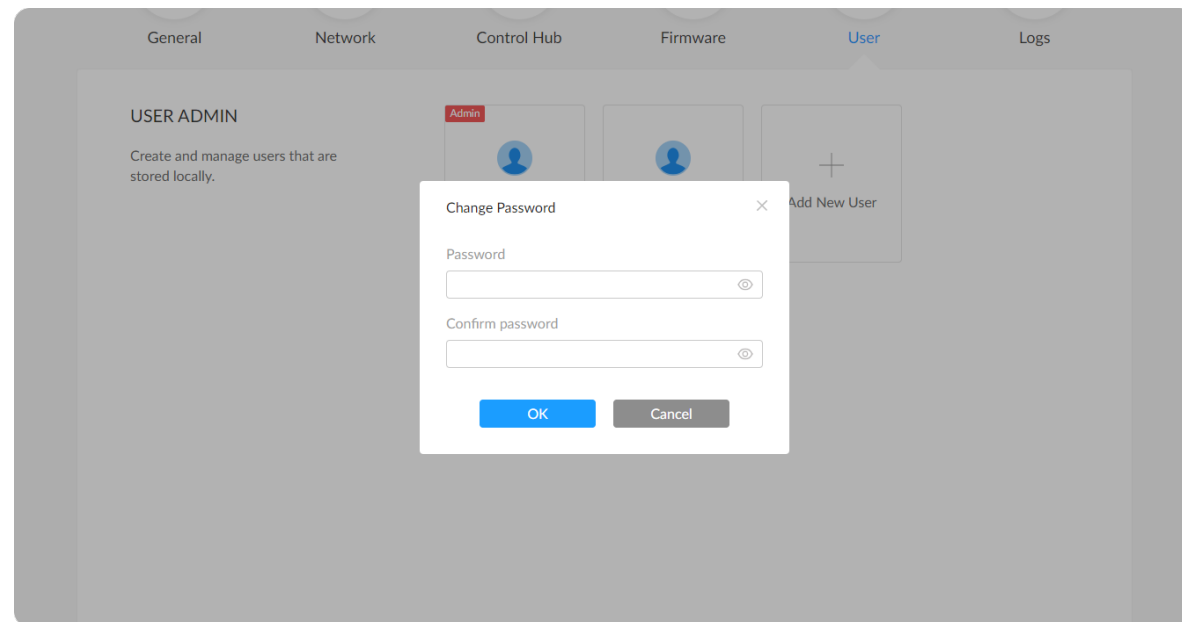

### Solution 2: via System > User tab (with administrative rights)


1. Access the Web UI and sign in from the administrator account, then you can change any user's password.
2. Click and enter the **System > User** tab.
3. Hover the cursor over the specified user name, then click the appeared **Set password**.
4. In the prompt window, type in and confirm your password. The password is a string of 1 to 32 characters, which contains letters A-Z, a-z, numbers 0-9 and special characters \_~!@#\$%^&\*~+=.
5. Click **Apply**.

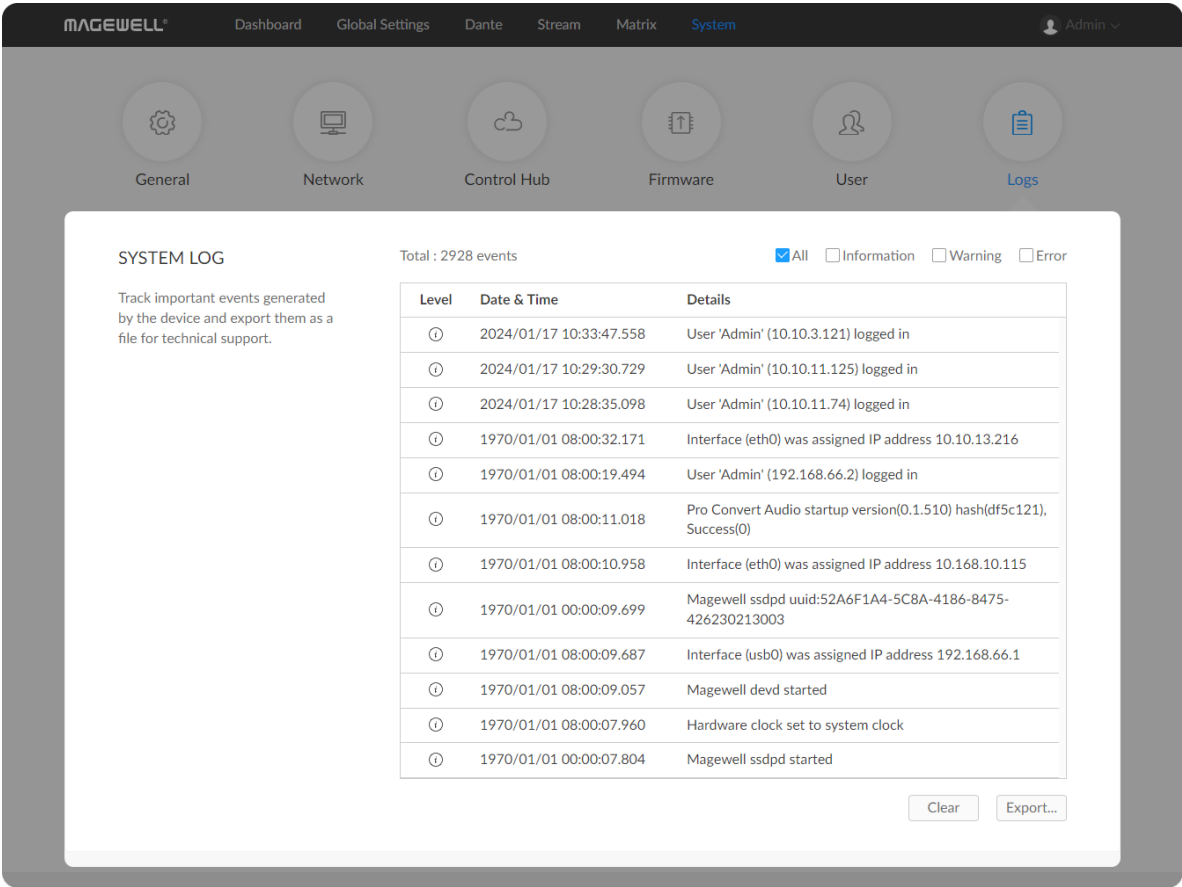

Exporting/Clearing System Logs

1. Access the Web UI and sign in as administrator.
2. Click and enter the **System** tab, then select **Log**.
3. (Optional) Filter current logs. By default, all logs are displayed in the table. Log entries can be categorized as "error", "warning", and "information".
  - **Total** shows the total number of filtered events.
  - **All**: Check to show all logs.

The device can store up to 1000 local log entries. After 1000 entries have been recorded, the oldest entry will be deleted before a new one can be added.
  - **Information**: Check to show information logs - which record user actions or significant system events, e.g. login and signal locked.
  - **Warning**: Check to show warning logs - which mean something has not worked as it should. e.g. Ethernet is disconnected or signal is unlocked.
  - **Error**: Check to show error logs - which mean some serious error has happened.
4. (Optional) Click **Export...** to get a .html file of all logs. Click **Yes** when prompted.
5. (Optional) Click **Clear** to delete all logs. Click **Yes** when prompted.

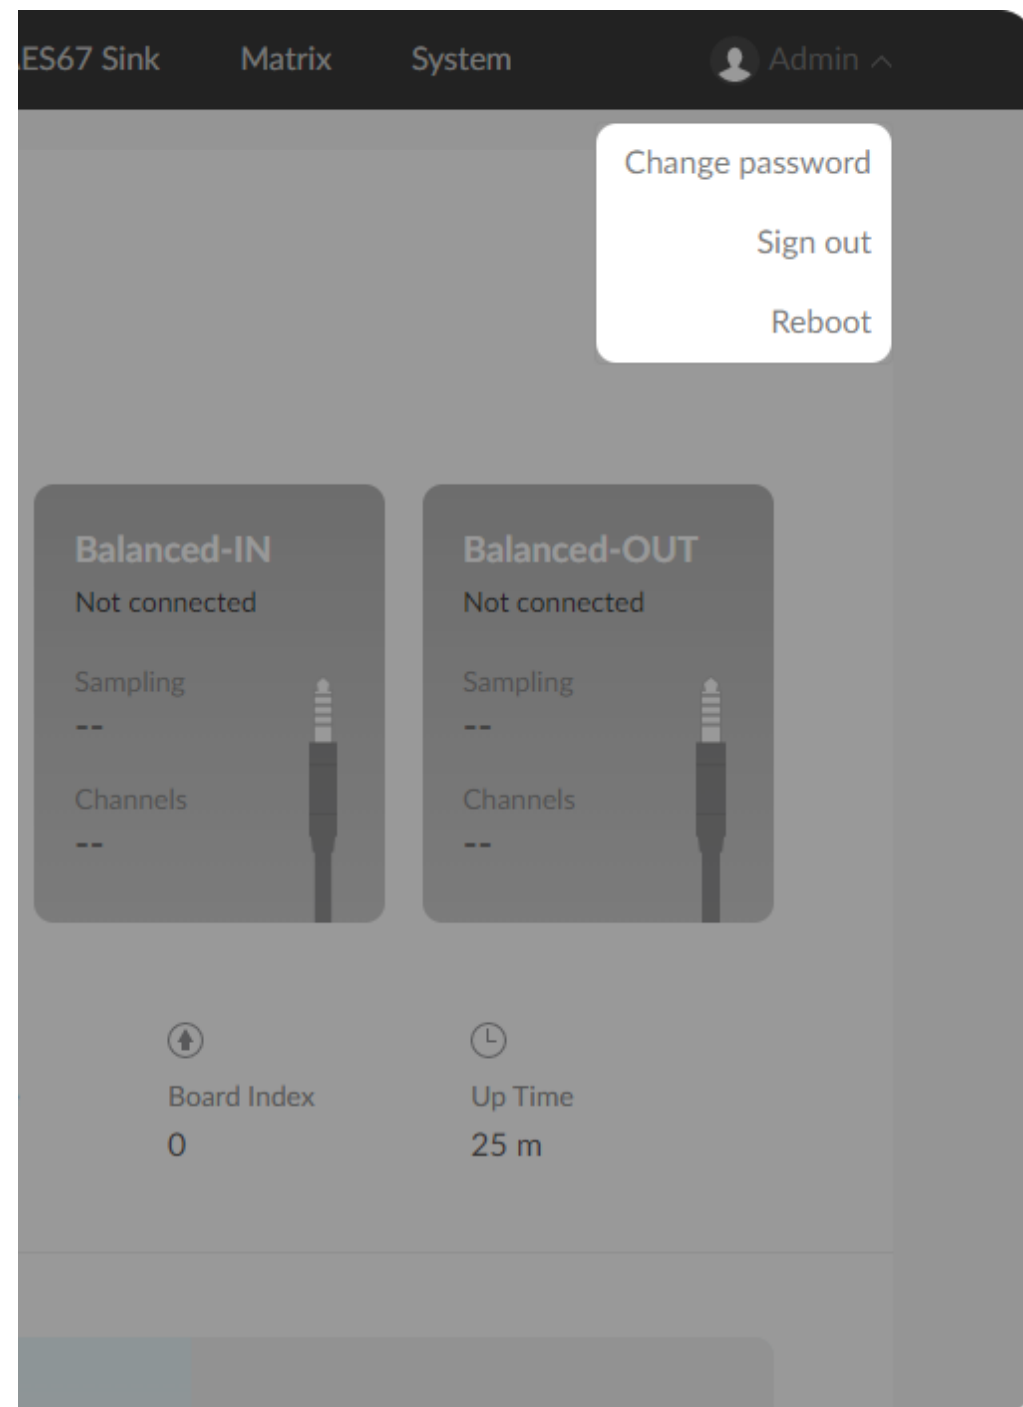


## Rebooting/Resetting Pro Convert

Rebooting/resetting your Pro Convert when encountering unexpected problems.

### Rebooting Pro Convert

⚠ Rebooting your device will not lose any of your configuration settings.

1. Access the Web UI and sign in as administrator.
2. Click the drop-list icon  behind your username at the top-right of the Web UI and select **Reboot**.
3. When prompted in the window, click **Reboot**.

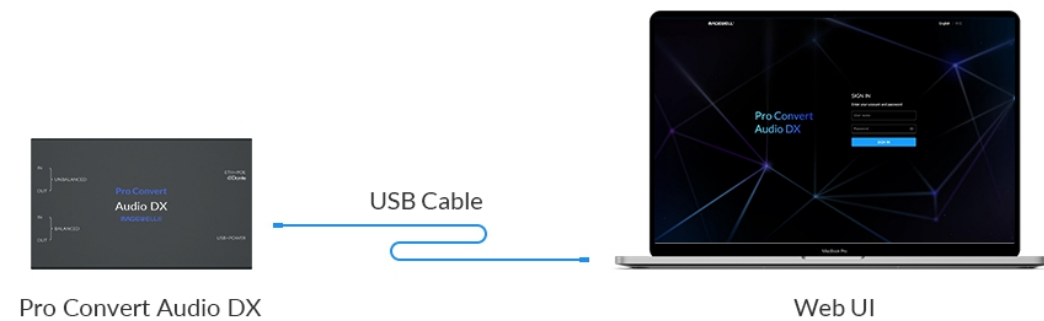


Fig1. Connections

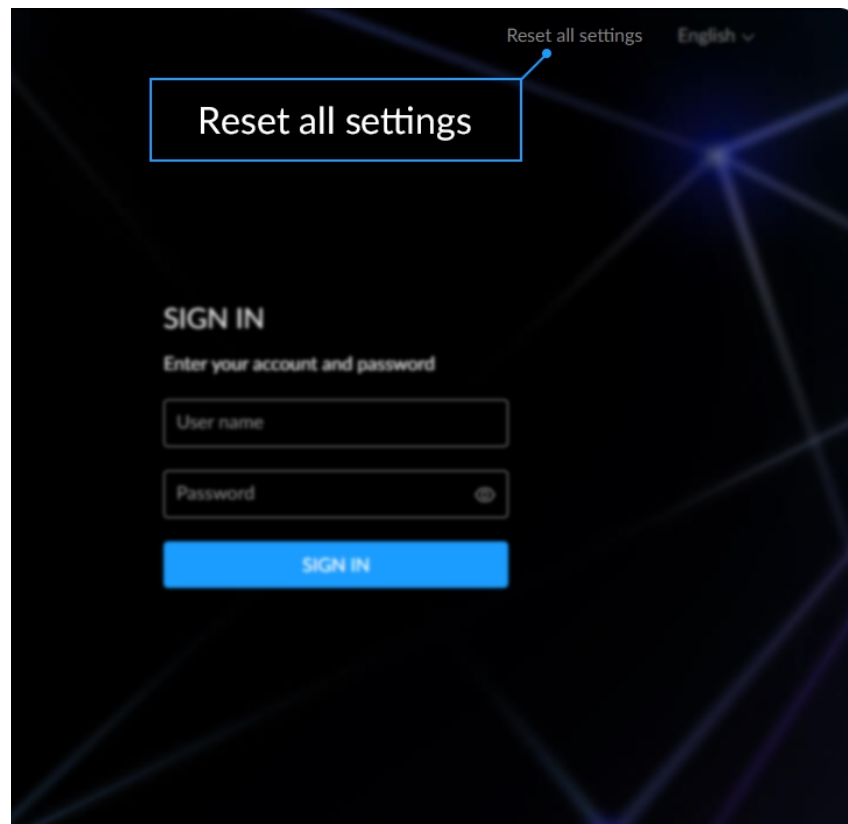



Fig2. Reset all settings

## Resetting All Settings

⚠ Warning: Resetting your device will lose all your custom configurations.

1. Connect the device and your computer with the USB cable.
2. Launch your web browser and type in the USB NET address to access the Web UI **SIGN IN** page.  
The default address is 192.168.66.1. Please do not change it unless there is a conflict in your network.
3. Click **Reset all settings** at the top right corner of the **SIGN IN** page.  
The reset process may take a few minutes.

## FAQ

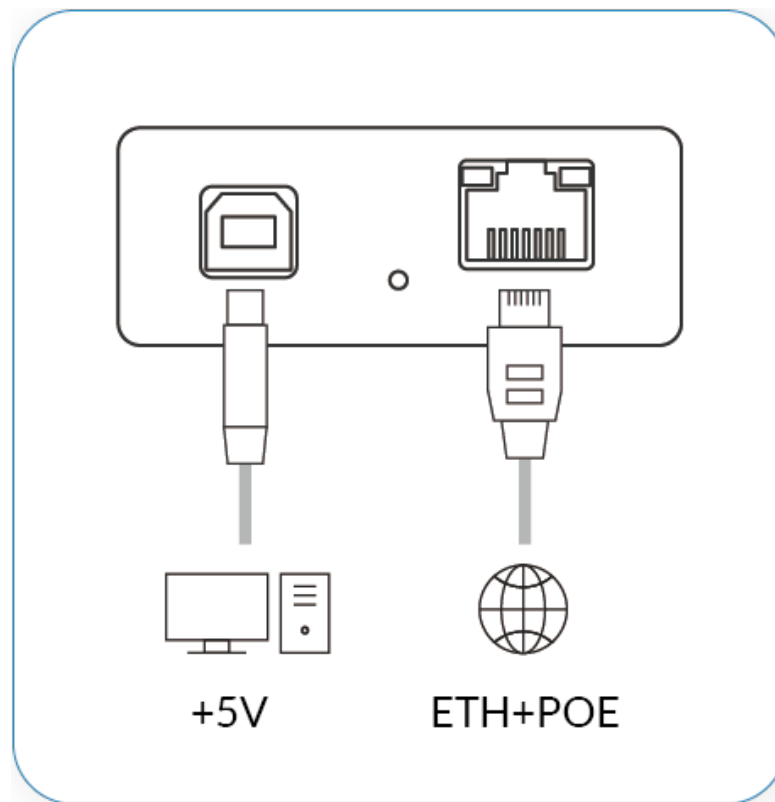


### How to supply power to the Pro Convert

There are 2 ways to power your converter as shown in the left figure:

1. Via USB: Plug in the supplied 5V power adapter via the USB cable to supply power.
2. Via PoE: Plug in an Ethernet cable connected to a PoE switch or a PoE adapter for power and Ethernet connection.

Note:

- Pro Convert devices require a 5V DC source with a current rating of less than 2.1A.
- We recommend that you use only the included Magewell accessories.
- If any included accessory is lost or broken, please contact your Magewell authorized local resellers for help.

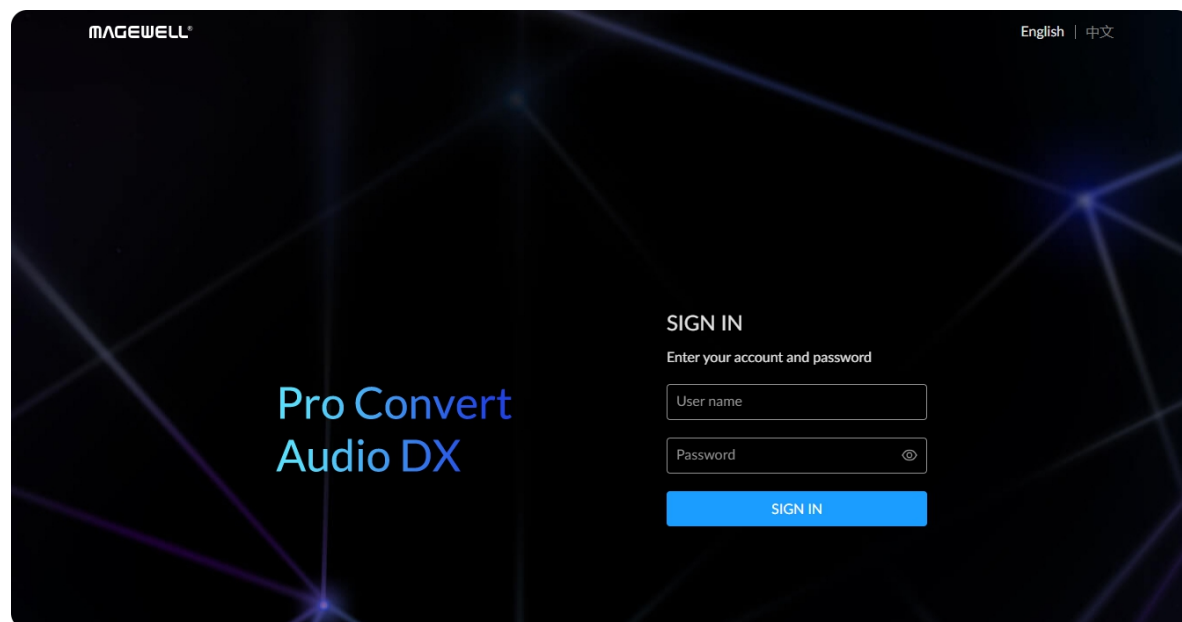

## How to configure Pro Convert via Web UI

Pro Convert allows you to set up and control via a web-based user interface as either an administrator or a general user.

You can get access to the Web UI using Windows File Explorer or via USB NET. Make sure that at least one of the following web browsers is installed in your system.

- Google Chrome version 49 and above
- Microsoft Edge
- Mozilla Firefox version 61 and above
- Apple Safari 11.1 and above
- Opera 55.0.2994.44 and above





### 1. Using Windows File Explorer

This method is available for Windows 7/8/8.1/10/11 users.

**Step 1** Connect your converter via Ethernet and power it up as shown on the left.


**Step 2** Open a File Explorer window in one of the following ways.

- Click on the Start  button and find File Explorer in the Start menu.
- Press the Windows logo key  + E.
- Select the folder icon on the taskbar.

**Step 3** Select the **Network** view at the bottom of the list of items on the left side of the File Explorer.

**Step 4** Turn on the network discovery function if prompted.



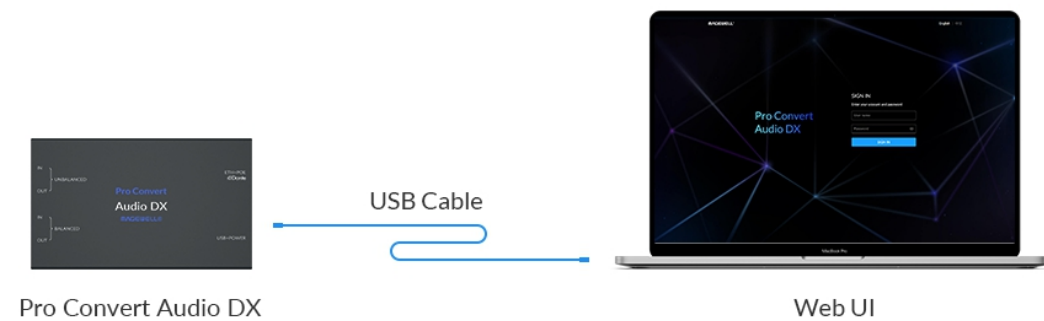

**Step 5** Find your Pro Convert device in the **Other Devices** section, where it will be shown as "**serial number**".

- The **serial number** (marked on your device) will be in a form like "D424000000000".

**Step 6** Double click the converter icon to open the Web UI of the device in your web browser.


## 2. via USB NET

**Step 1** Connect the Pro Convert device to your computer using the USB cable.

**Step 2** Launch your web browser, and type in USB NET address to access the Web UI. The default address is **192.168.66.1**.

**Step 3** Enter your account and password in the **SIGN IN** page, and configure the device after you login successfully.

The default admin account (case-sensitive) is Admin, Admin. It is recommended to change the admin password after logged-in.

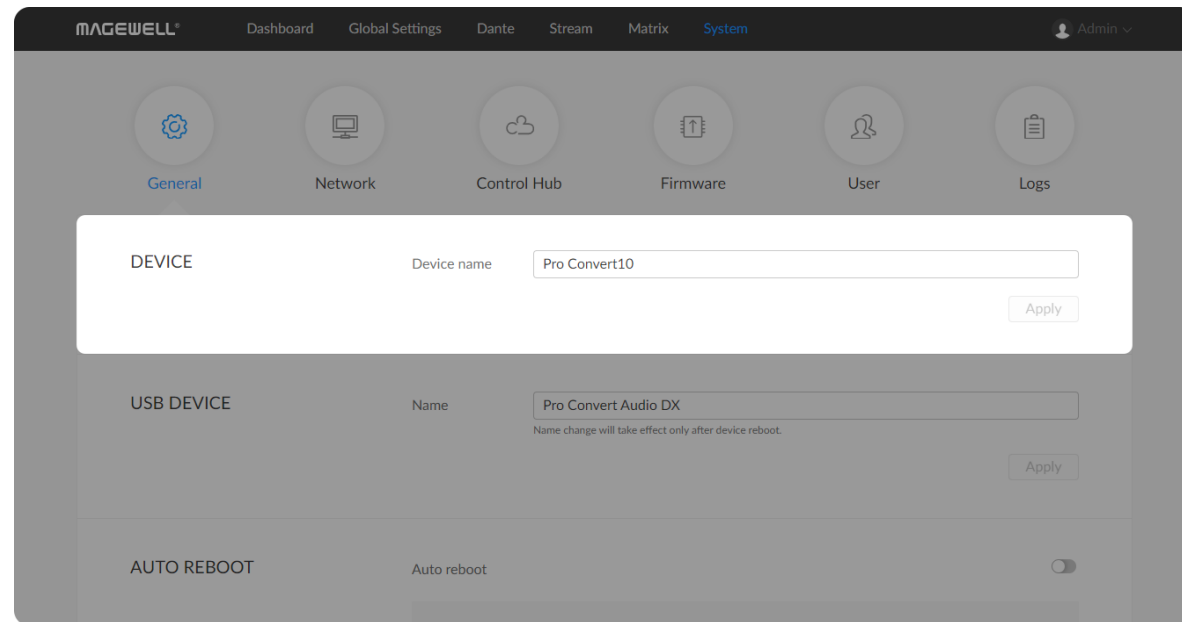

## How to change device name

Pro Convert allows you to set up and control via a web-based user interface as either an administrator or a general user. Changing the device name requires administrator rights, while changing the source name only requires general user rights.

**Step 1** Access the Web UI, and sign in as administrator.

**Step 2** Click and enter the **System > General** tab.


**Step 3** Change the **Device name**.

The device name is a string of 1 to 30 non-case sensitive characters, containing letters a to z, A to Z, 0-9, spaces and special characters like \_-+.

**Step 4** Click **Apply** to save your changes.

It may take a few minutes for your settings to take effect.

**Step 5** Verify your settings: click and enter the **Dashboard** tab. The value should be the same as your settings.

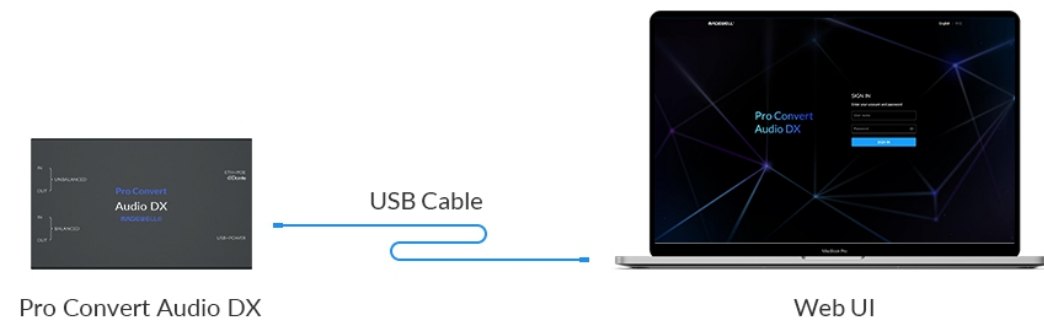

## How to reset a Pro Convert device

⚠ Warning: Resetting your device will lose all your configuration data.

- Step 1** Connect your converter to your computer.
- Step 2** Launch your web browser, and type in the USB NET address to access the Web UI **SIGN IN** page.
- The default address is **192.168.66.1**. Please do not change it unless there is a conflict on your network.
- Step 3** Click **Reset all settings** at the top right corner of the **SIGN IN** page.
- The reset process may take a few minutes.

Reset all settings English ▾

Reset all settings

## SIGN IN

Enter your account and password

User name

Password

SIGN IN

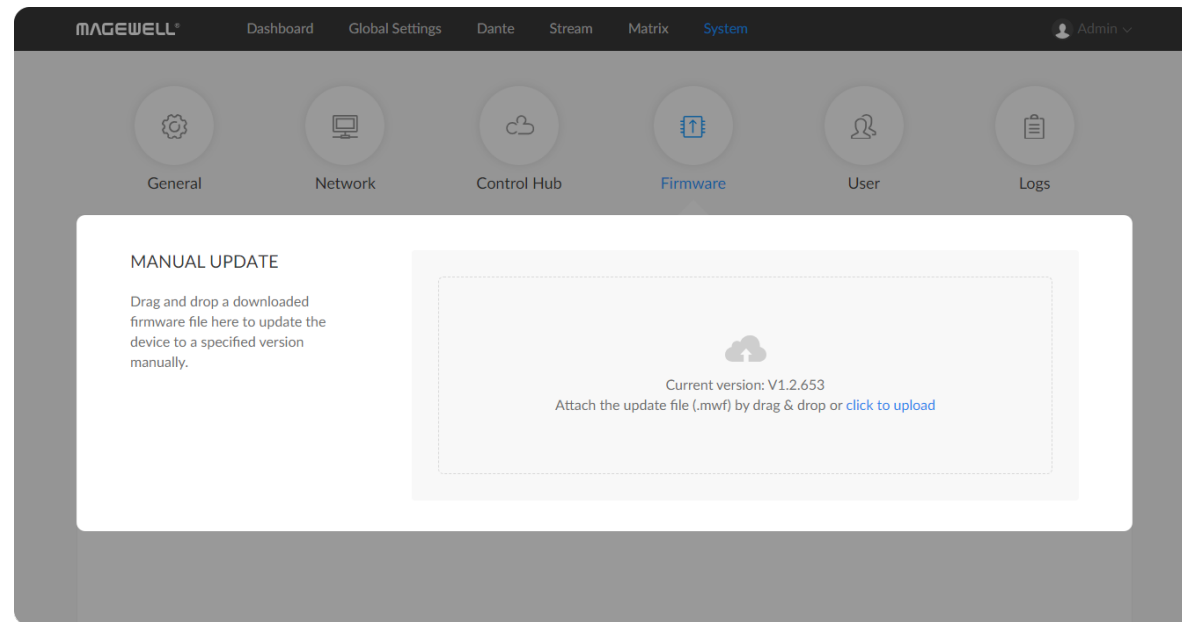


Figure1. Click Manual update

## How to manually update the firmware for Pro Convert

You can update firmware via the Web UI with administrative rights.

**Step 1** Access the Web UI and sign in as administrator.

**Step 2** Click and enter the **System > Firmware** tab.

**Step 3** Click on **click to upload**.

**Step 4** Select the **.mwf** firmware update file from your local storage.

You can download the Pro Convert firmware package from the Downloads section of the Magewell website:

[www.magewell.com/downloads/pro-convert](http://www.magewell.com/downloads/pro-convert).

**Step 5** Click **Open** to upload the updates package.

The device will automatically verify the update file.

The unit will upload the file after the file verification is passed.

**Step 6** In the **Manual Update** window, click **Update**.


⚠ DO NOT shut down or reboot the device during updating procedure.

**Step 7** After loading successfully, click **Reboot** to complete the update.

The reboot process may take a few minutes.

**Step 8** Login to the Web UI again and check the current **Firmware version** number in the **Dashboard** tab.

The **Firmware version** should now show the number of the new update.

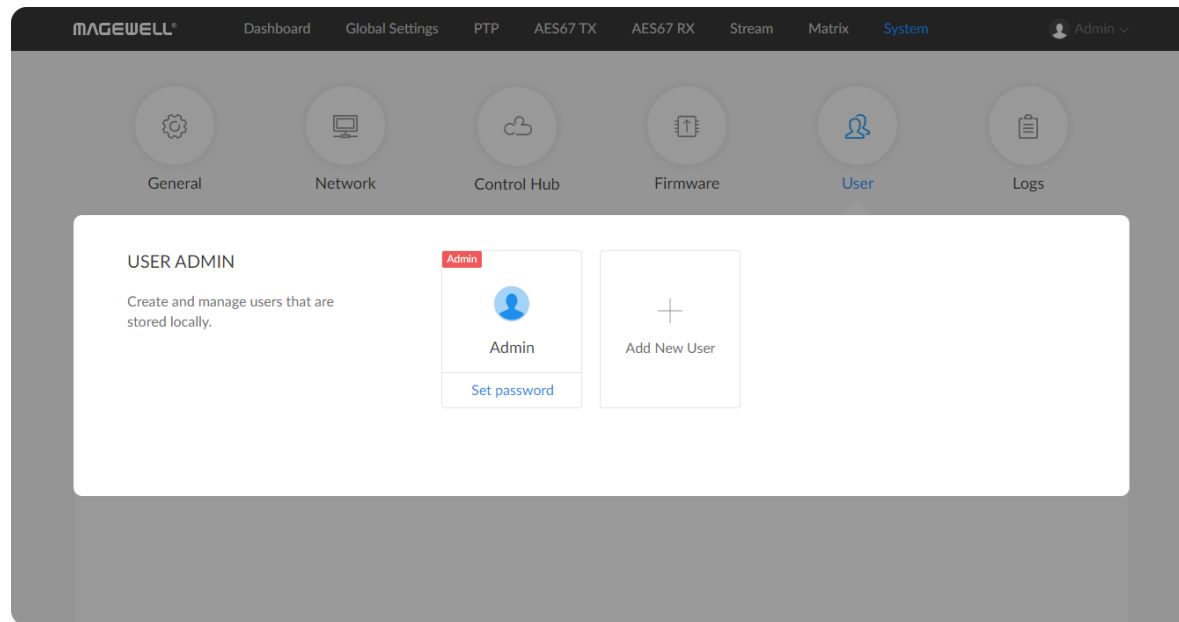

## What to do if you forgot the password

If you are a general user, ask your administrator to set a new password for you.

If you are the administrator, you need to reset all settings back to default values, then set a new admin password.

### 1. To reset a general user's password.

- Step 1** Access the Web UI, and sign in as administrator.
- Step 2** Click and enter the **System** tab.
- Step 3** Click the **Set password** link which appears when your mouse hovers over the user name.
- Step 4** Type in new password and confirm the new password as prompted in the window.  
  
The password is a string of 1 to 32 case-sensitive characters, which contains A-Z, a-z, 0-9 and special characters \_-~!@#\$\$%^&\*~+=.
- Step 5** Click **OK**.

### 2. To set a new admin password.

- Step 1** Connect the device to a computer with the USB cable.
- Step 2** Type in the USB NET address to your web browser.  
  
The default IP address of USB NET is 192.168.66.1. Please do not modify it unless there is a conflict on your network.
- Step 3** Click **Reset all settings** at the top-right corner of the **SIGN IN** page.  
  
The reset process may take a few minutes, and all configuration data will be lost – not just the passwords.
- Step 4** Sign in to the Web UI via the default admin account (case-sensitive): Admin, Admin.

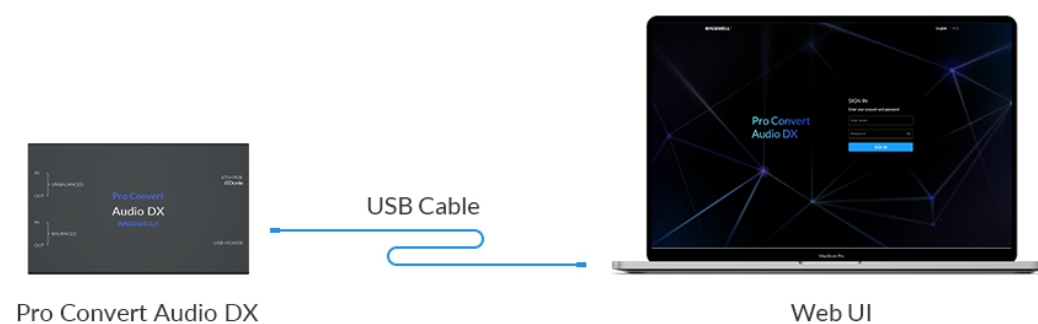


Figure1. Connections

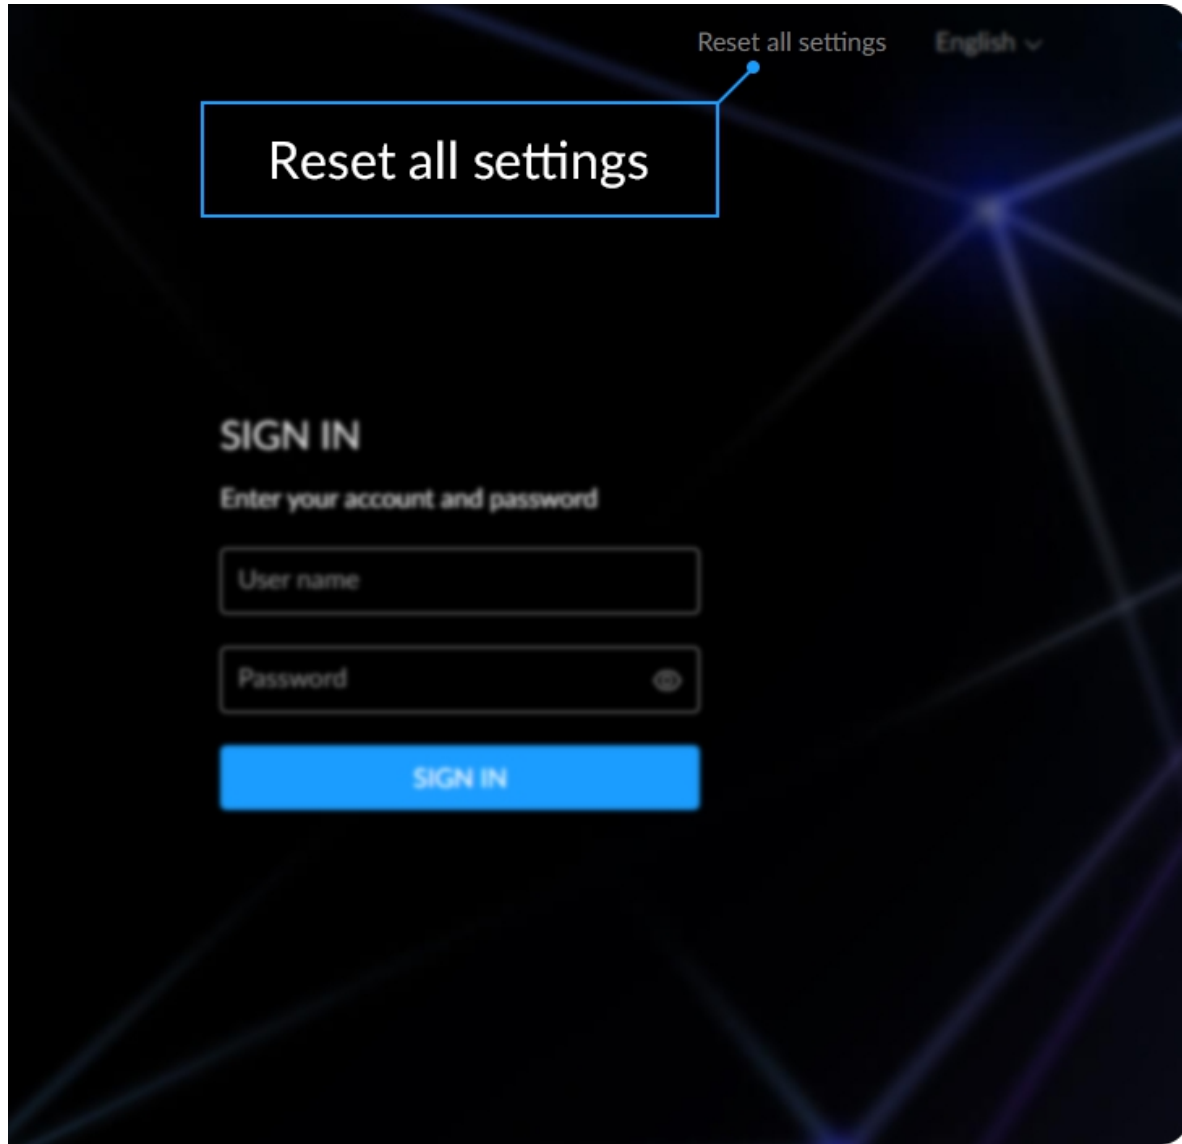


Figure2. Reset all settings

**Step 5** Click and enter the **System** tab.

**Step 6** Click the **Set password** link appeared when your mouse hovers over the user name.

**Step 7** Type in new password, and confirm the new password as prompted in the window.

The password is a string of 1 to 32 case-sensitive characters, which contains letters A-Z, a-z, numbers 0-9 and special characters \_-~!@#\$%^&\*+.=.

Step 8 Click **OK**.

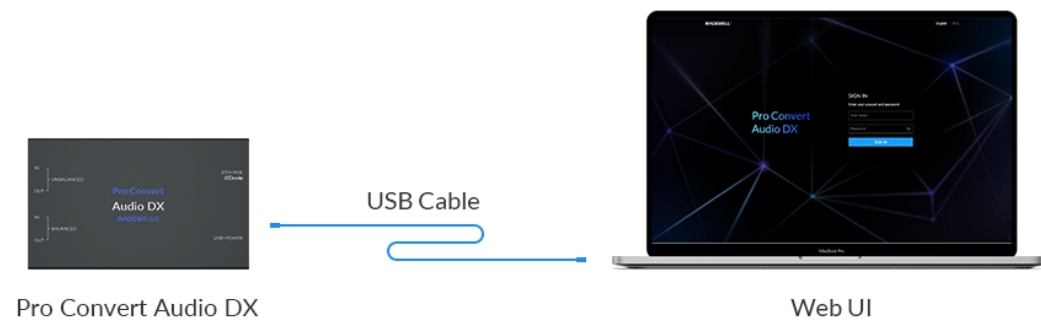


Figure1. Connections

```

C:\Users\win1064>ipconfig

Windows IP Configuration

Ethernet adapter Ethernet:

    Connection-specific DNS Suffix  . : 
    Link-local IPv6 Address . . . . . : fe80::6c54:b184:f07a:eacd%9
    IPv4 Address. . . . . : 192.168.1.124
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.1.1

Ethernet adapter Ethernet 2:

    Connection-specific DNS Suffix  . : 
    Link-local IPv6 Address . . . . . : fe80::146b:1130:8511:736f%17
    IPv4 Address. . . . . : 192.168.55.3
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 

Ethernet adapter Ethernet 5:

    Connection-specific DNS Suffix  . : 
    Link-local IPv6 Address . . . . . : fe80::d962:b7ac:a87d:82ed%21
    IPv4 Address. . . . . : 192.168.65.2
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 
C:\Users\win1064>

```

Figure2. Windows Command Line Interpreter

## How to retrieve your USB NET IP Address

**Step 1** Connect the device and your computer with a USB cable as shown in the left Figure1. Connections.


**Step 2** Take the following steps according to your operating system.

- For Windows users
  1. Type **cmd** in the search bar to start the command interpreter.
  2. Type in **ipconfig**, and find an IPv4 address of the form 192.168.xxx.2, as shown in [Figure2. Windows Command Line Interpreter](#).
- For Linux users
  1. Launch the **terminal**.
  2. Type in **ifconfig -a**, and find an IPv4 address of the form 192.168.xxx.2, as shown in [Figure3. Linux Terminal](#).
- For Mac users
  1. Click the System Preferences icon in the Dock or choose **Apple menu > System Preferences**.
  2. Choose **Network > Pro Convert**, and check the **IP Address**.

⚠ If 192.168.xxx.2 is taken, the IP address would automatically change to another value within the ranges of 192.168.xxx.2 to 192.168.xxx.254.

**Step 3** Type in **192.168.xxx.1** in your web browser to access the Web UI.



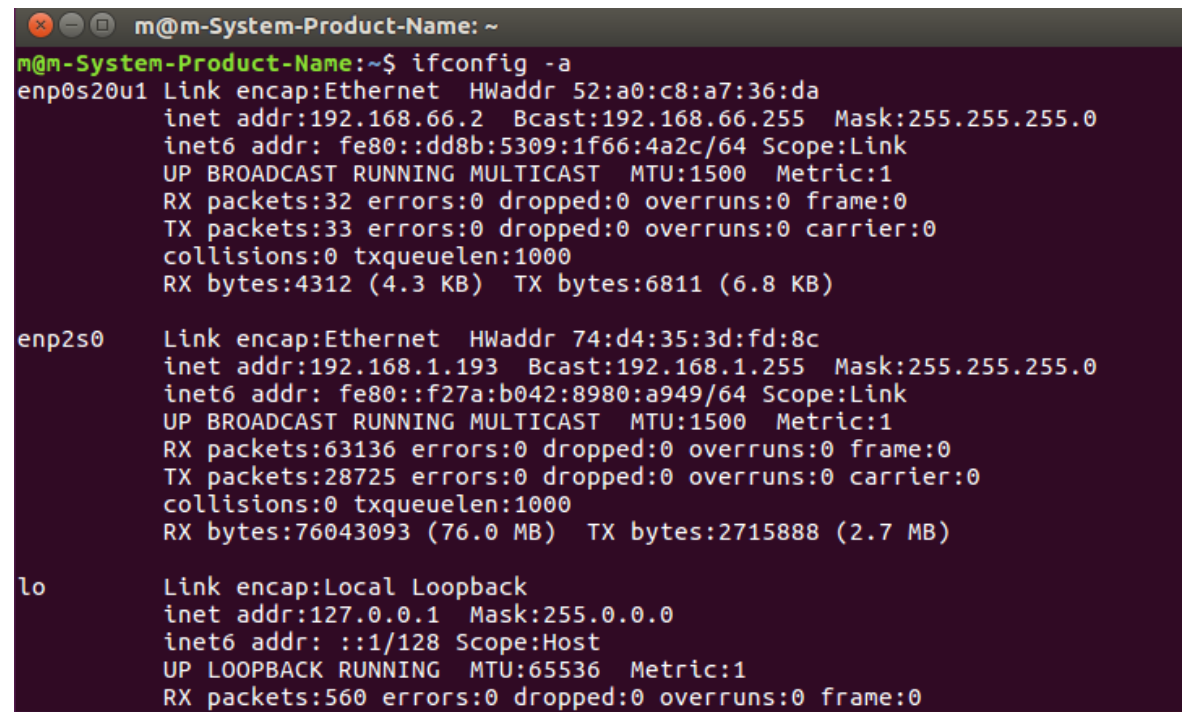

```
m@m-System-Product-Name: ~  
m@m-System-Product-Name:~$ ifconfig -a  
enp0s20u1 Link encap:Ethernet HWaddr 52:a0:c8:a7:36:da  
        inet addr:192.168.66.2 Bcast:192.168.66.255 Mask:255.255.255.0  
        inet6 addr: fe80::dd8b:5309:1f66:4a2c/64 Scope:Link  
        UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1  
        RX packets:32 errors:0 dropped:0 overruns:0 frame:0  
        TX packets:33 errors:0 dropped:0 overruns:0 carrier:0  
        collisions:0 txqueuelen:1000  
        RX bytes:4312 (4.3 KB) TX bytes:6811 (6.8 KB)  
  
enp2s0    Link encap:Ethernet HWaddr 74:d4:35:3d:fd:8c  
        inet addr:192.168.1.193 Bcast:192.168.1.255 Mask:255.255.255.0  
        inet6 addr: fe80::f27a:b042:8980:a949/64 Scope:Link  
        UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1  
        RX packets:63136 errors:0 dropped:0 overruns:0 frame:0  
        TX packets:28725 errors:0 dropped:0 overruns:0 carrier:0  
        collisions:0 txqueuelen:1000  
        RX bytes:76043093 (76.0 MB) TX bytes:2715888 (2.7 MB)  
  
lo        Link encap:Local Loopback  
        inet addr:127.0.0.1 Mask:255.0.0.0  
        inet6 addr: ::1/128 Scope:Host  
        UP LOOPBACK RUNNING MTU:65536 Metric:1  
        RX packets:560 errors:0 dropped:0 overruns:0 frame:0
```

Figure3. Linux Terminal

# Support

## Get the Latest Information

If you have any problems using Magewell products or need more technical information, please visit the following channels.

- Tutorial video: [www.magewell.com/tv](http://www.magewell.com/tv)
- YouTube: [Magewell](#)
- Knowledge base: [www.magewell.com/kb/pro-convert](http://www.magewell.com/kb/pro-convert)
- Official website: [www.magewell.com/pro-convert](http://www.magewell.com/pro-convert)

## Technical Support

- Submit your questions in the online Ticket System: [tickets.magewell.com](http://tickets.magewell.com)
- Contact the Magewell Technical Support Team at [support@magewell.net](mailto:support@magewell.net)

# Warranty

## Limited Warranty

Except otherwise set between you and Magewell in advance in a written form, the free limited warranty service starts from the date on your proof of purchase. The proof can be: sales contract, formal sales receipt, invoice or delivery note. The earliest date of these proofs is the starting date of the free limited warranty.

The period of free limited warranty goes as below:

- Pro Convert Family: two (2) years;
- The cables and power adapter provided as accessories: one (1) year.

## How to get the limited warranty

1. Please contact the Magewell support team by email (support@magewell.net) first, to determine whether your problem can only be solved by returning it to Magewell for repair. Magewell might ask you to take photos of the front and back of the defective products.
2. Magewell will issue an RMA letter to you if it is confirmed that you need to return the faulty product for further examination or repair. Please fill in the RMA with necessary information as required.  
If it is regular repair, you will be responsible for the shipping cost, duties and insurance cost (if applicable); if the product is DOA, Magewell will be responsible for the shipping cost.
3. If some components need to be replaced, Magewell will decide to repair, renovate or replace the components by itself. Magewell may use new or repaired component to repair the product. The repaired product can be expected to work normally and the performance to remain the same. Repaired products can work in a good working condition and at least function the same as the original unit. The original replaced component will become the property of Magewell and components which are replaced for the client will become his/her property.
4. If the product is within warranty, Magewell will repair or replace the faulty units at its own discretion. In circumstances where the faulty unit is replaced by another one, Magewell may use new, repaired or renovated units. The faulty unit will then become the property of Magewell while the replacement unit will become the property of the purchaser.
5. If the warranty expires, Magewell will inform the purchaser whether the products can be repaired and the maintenance costs they need to pay. If purchasers

decide to repair, Magewell will repair, renovate, or replace the components after receiving the maintenance costs. If purchasers give up repairing, Magewell will dispose of the faulty unit if the purchaser chooses that option.

6. The repaired or replaced product assumes 1) the remaining term of the Warranty of the replaced unit or faulty unit; 2) ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you. The extended warranty is only valid for repaired/replaced components.
7. The period of service depends on the client's location (country and area) and the product.

To view the complete warranty policy, please visit [www.magewell.com/quality-assurance](http://www.magewell.com/quality-assurance).

# Notice

Copyright © 2024 [Nanjing Magewell Electronics Co., Ltd.](#)

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the publisher, except in the case of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law.

## Trademarks

NDI<sup>®</sup> is trademarks or registered trademarks of Vizrt. Dante<sup>®</sup> is registered trademarks of Audinate Pty Ltd. Other trademarks and company names mentioned are the properties of their respective owners.

## About this Document

- This document is for reference only. Please refer to the actual product for more details.
- The user shall undertake any losses resulting from violation of guidance in the document.
- In case that PDF document cannot be opened, please upgrade the reading tool to the latest version or use other mainstream reading tools.
- This company reserves rights to revise any information in the document anytime; and the revised contents will be added to the new version without prior announcement. Some functions of the products may be slightly different before and after revision.
- The document may include technically inaccurate contents, inconsistencies with product functions and operations, or misprint. Final explanations of the company shall prevail.
- The only warranties for Magewell products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Magewell shall not be liable for technical or editorial errors or omissions contained herein.

# Glossary and Abbreviations

## Audio DX

Audio DX is a published standard which defines interoperability guidelines for high performance professional digital IP networking.

## EBU

The European Broadcasting Union (EBU) is an alliance of public service media organization whose countries are within the European Broadcasting Area (EBA) or who are members of the Council of Europe.

## Dante

Digital Audio Network Through Ethernet is an Audio over Ethernet (AoE) system developed in 2006 by Audinate, based in Sydney, Australia. It was designed to build and improve on previous AoE technologies such as CobraNet and EtherSound.

## PoE

Power over Ethernet (PoE) is a networking feature defined by the IEEE 802.3af and 802.3at standards. PoE allows a single cable to provide both data connection and electric power to attached devices.

## PTP

The Precision Time Protocol (PTP) is a protocol used to synchronize clocks throughout a computer network.

## QoS

Quality of service (QoS) is the description or measurement of the overall performance of a service. To quantitatively measure quality of service, several related aspects of the network service are often considered, such as packet loss, etc.

## SMPTE

The Society of Motion Picture and Television Engineers (SMPTE), founded in 1916 as the Society of Motion Picture Engineers or SMPE, is a global professional association of engineers, technologists, and executives working in the media and entertainment industry.